






Setting the Focal Length for the Image Stabilizer Function

By setting the focal length of the lens in advance, you can use the image stabilizer function with lenses other than the Four Thirds system.

- 1 Press the IS button to display the [IMAGE STABILIZER] screen.
- 2 Press the  button.
- 3 Set the focal length using the control dial or  , then press .

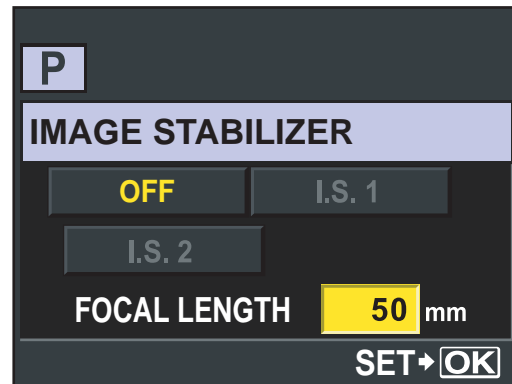

Possible focal length settings

| | | | | | | | | | |
|--------|--------|--------|--------|--------|---------|--------|--------|--------|--------|
| 8 mm | 10 mm | 12 mm | 16 mm | 18 mm | 21 mm | 24 mm | 28 mm | 30 mm | 35 mm |
| 40 mm | 48 mm | 50 mm | 55 mm | 65 mm | 70 mm | 75 mm | 80 mm | 85 mm | 90 mm |
| 100 mm | 105 mm | 120 mm | 135 mm | 150 mm | 180 mm | 200 mm | 210 mm | 250 mm | 300 mm |
| 350 mm | 400 mm | 500 mm | 600 mm | 800 mm | 1000 mm | | | | |

- If you are using a lens with a focal length that is not shown on the chart, please select the closest value.
- This setting is invalid when the Four Thirds system lens is attached.