

Notice

PEN-F Firmware Update

The following functions are modified or added by Firmware Version 2.0.

- You can check the current firmware version by selecting [Firmware] in [Setup Menu].

Using art filters (ART)

Art filters can now be selected using touch controls.

Registering Favorites settings (Assign Custom Modes)

You can now recall settings saved to the C1 through C4 positions on the mode dial.

- Select [Reset / Custom Modes] in Shooting Menu 1 and press the button.
- Select [Recall from Custom Mode] and press .
- Select [Custom Mode C1]–[Custom Mode C4] and press the button.
- Select [Yes] and press the button.

- The shooting mode will not be applied if the mode dial is set to **P**, **A**, **S** or **M**.

Disp/)/PC

Note the following changes to the Custom Menu (**MENU** → →):

[LV Close Up Mode] Moved, [LV Close Up Settings] Added

Option	Description
LV Close Up Mode	[LV Close Up Mode] can now be found under [LV Close Up Settings].
LV Close Up Settings	[LV Close Up Mode]: When set to [mode1], pressing the button halfway in the magnified live view returns to the magnified frame display. When set to [mode2], pressing the button halfway in the magnified live view switches to the Zoom AF display. [Live View Boost]: When set to [On], the magnified area is adjusted for proper exposure. This is useful to check the focus when shooting in dark locations. When set to [Off], the magnified area is displayed with the brightness of live view before magnification. This is useful to check the focus when shooting in backlit locations.

Lock] Moved, Settings] Added

Option	Description
Lock	Lock] can now be found under Settings].
Settings	Lock]: Select [On] to maintain the aperture at the selected value even when releasing the button. [Live View Boost]: Select [On] to shoot while checking the subject even under low-light conditions.

Exp//ISO

Note the following change to the Custom Menu (**MENU** → →):

[Lowest S/S Setting] Added

Option	Description
ISO-Auto Set	[Upper Limit / Default]: Choose the upper limit and default value used for ISO sensitivity when [Auto] is selected for ISO. [High Limit]: Choose the upper limit for auto ISO sensitivity selection. [Default]: Choose the default value for auto ISO sensitivity selection. [Lowest S/S Setting]: Choose the shutter speed at which the camera automatically raises ISO sensitivity in modes P and A . If set to [Auto], the camera automatically sets the shutter speed.