

# Quick Start Guide SP-510UZ

## Start Here

For more information, please refer to the Basic & Advanced Manuals or visit: [www.olympusamerica.com/support](http://www.olympusamerica.com/support)


OLYMPUS IMAGING AMERICA INC.

© 2006 OLYMPUS IMAGING CORP.  
Printed in Japan

1AG6P1P3138--


VH683701

## 1 Gather these items (box contents)

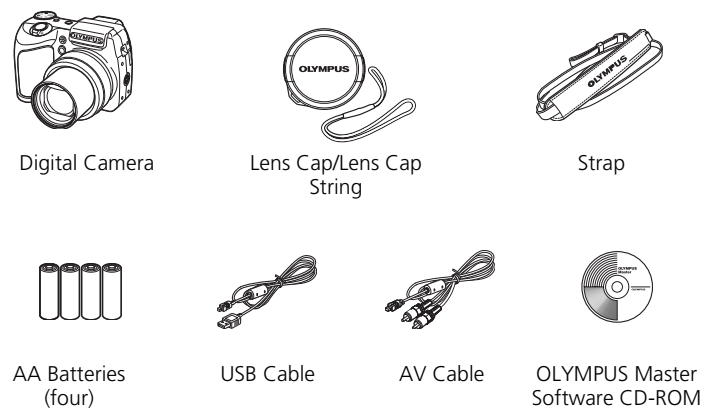


Items not shown: Advanced Manual, Basic Manual and warranty card.  
Contents may vary depending on purchase location.

### Attach the strap and the lens cap

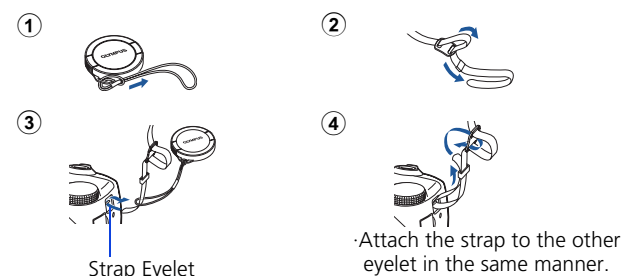

● Pull the strap tight so that it does not come loose.

## 2 Prepare the battery

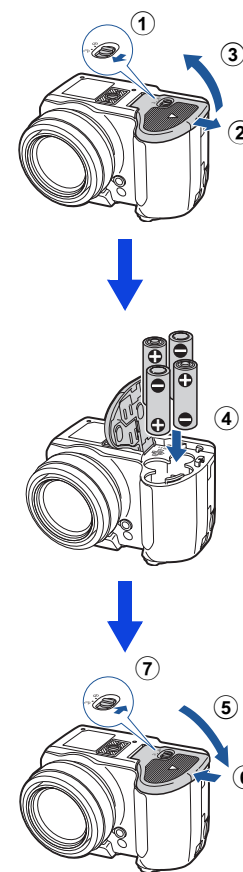


● For details on inserting an optional xD-Picture Card (hereinafter called the card), please refer to the Advanced Manual.

## 3 Turn the camera on

This explains how to turn on the camera in shooting mode.


### a. Set the mode dial to **AUTO**.

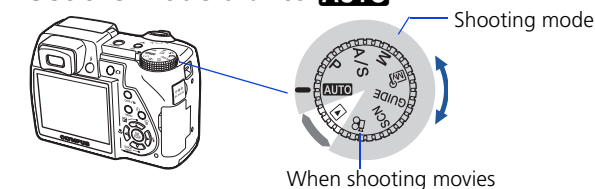

### Still picture shooting modes

<b>AUTO</b>	Allows you to take pictures with full automatic settings.
<b>P</b>	The camera automatically sets the optimum aperture value and shutter speed.
<b>A/S</b>	Allows you to set the aperture manually. / Allows you to set the shutter speed manually.
<b>M</b>	Allows you to set both the aperture and shutter speed manually.
<b>Mv</b>	Allows you to set each shooting function manually and use as your original shooting mode.
<b>GUIDE</b>	Allows you to set the target items by following the shooting guide displayed on the screen.
<b>SCN</b>	Allows you to shoot pictures by selecting a scene according to the shooting condition.


### b. Press the **POWER** button.

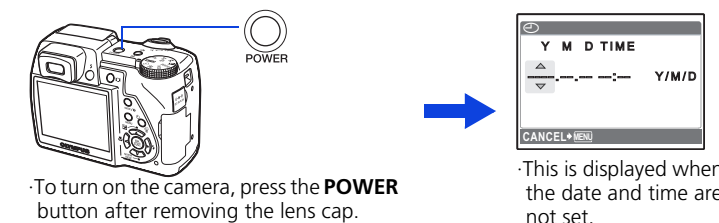

● To turn off the camera, press the **POWER** button once again.


## 4 Set date and time

### About the date and time setting screen

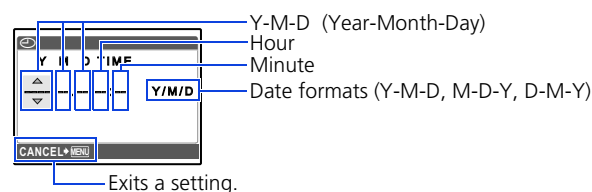


### a. Press the **OK/FUNC** button and the **QUICK VIEW** button to select **[Y]**.

● The first two digits of the year are fixed.

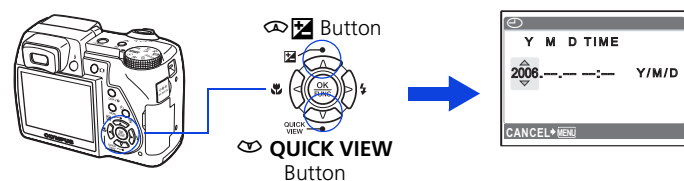

### b. Press the **OK/FUNC** button.

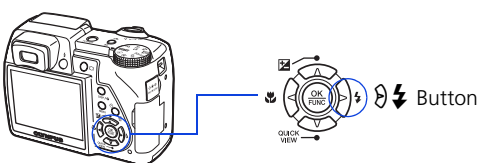

### c. Press the **OK/FUNC** button and the **QUICK VIEW** button as in a. to select **[M]**.

### d. Press the **OK/FUNC** button.

### e. Press the **OK/FUNC** button and the **QUICK VIEW** button to select **[D]**.

### f. Press the **OK/FUNC** button.

### g. Press the **OK/FUNC** button and the **QUICK VIEW** button to select "hour", "minute".


● The time is displayed in the 24-hour format.

### h. Press the **OK/FUNC** button.

### i. Press the **OK/FUNC** button and the **QUICK VIEW** button to select **[Y/M/D]**.


### j. After all items have been set, press the **OK/FUNC** button.

● For precise time setting, press the **OK/FUNC** button as the time signal strikes 00 seconds.

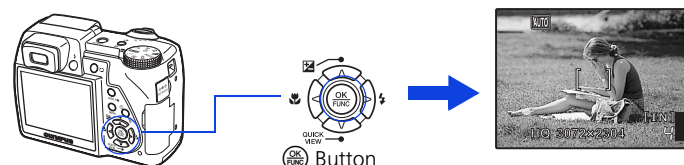


## 5 Shoot


### a. Hold the camera.

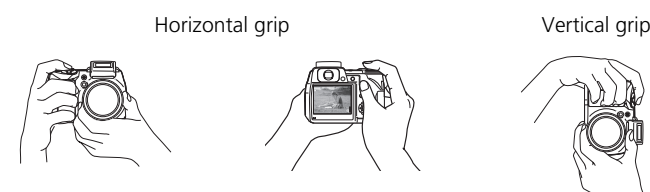

### b. Focus

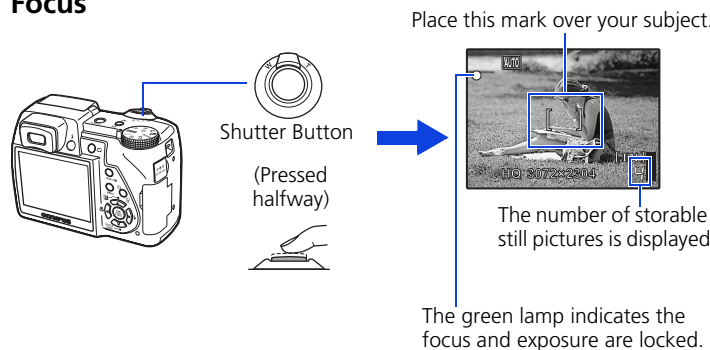


### c. Shoot

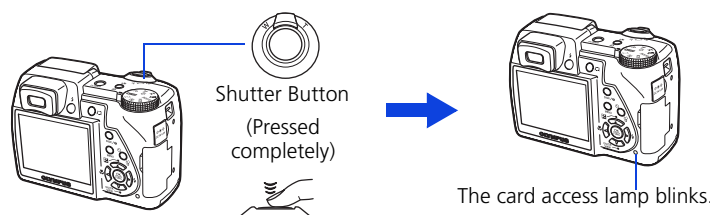

## 6 View pictures


### a. Set the mode dial to **REVIEW**.

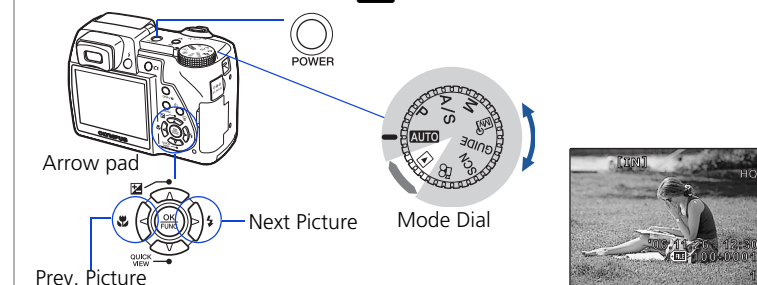

### Erase pictures

### a. As described in a. above, display the picture you want to erase.

### b. Press the **OK/FUNC** button.

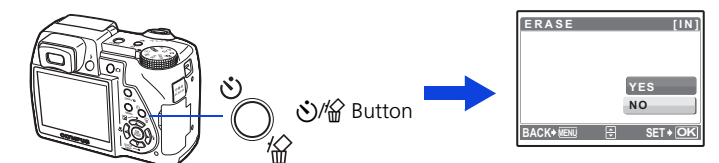

### c. Press the **OK/FUNC** button to select **[YES]**, and press the **OK/FUNC** button to erase the image.

