

# Quick Start Guide

## Stylus 1000

### Start Here

For more information, please refer to the Basic & Advanced Manuals or visit: [www.olympusamerica.com/support](http://www.olympusamerica.com/support)


OLYMPUS IMAGING AMERICA INC.

© 2006 OLYMPUS IMAGING CORP.  
Printed in Japan

1AG6P1P3252--


VH705401

## 1 Gather these items (box contents)

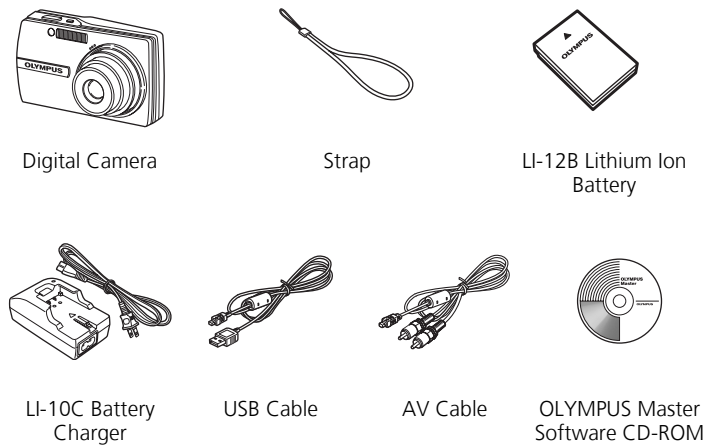

Items not shown: Advanced Manual (CD-ROM), Basic Manual, and warranty card. Contents may vary depending on purchase location.


### Attach the strap

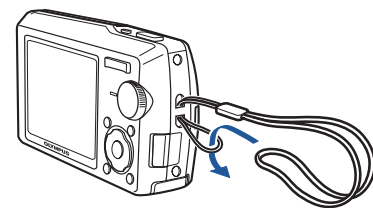

● Pull the strap tight so that it does not come loose.


## 2 Prepare the battery

### a. Charge the battery

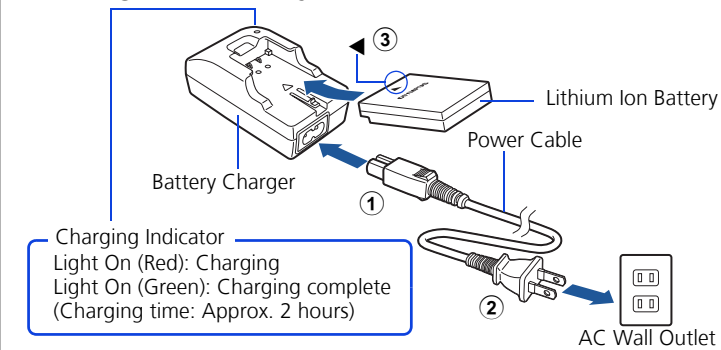

● Battery comes partially charged.

### b. Insert the battery in the camera

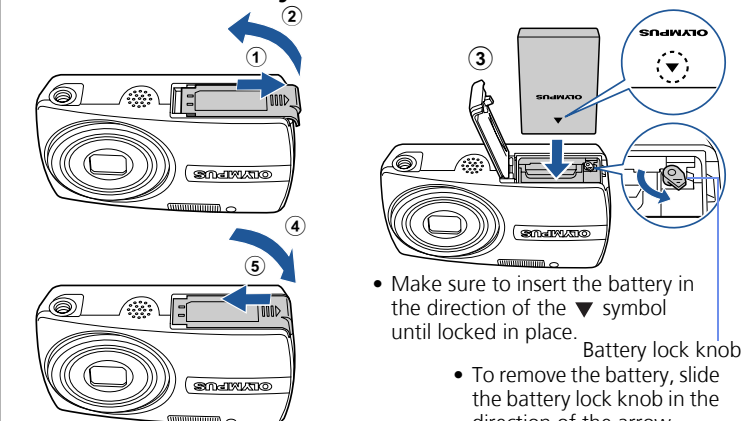


● For details on inserting an optional xD-Picture Card™, please refer to the advanced manual.

## 3 Turn the camera on

This explains how to turn on the camera in shooting mode.


### a. Set the mode dial to

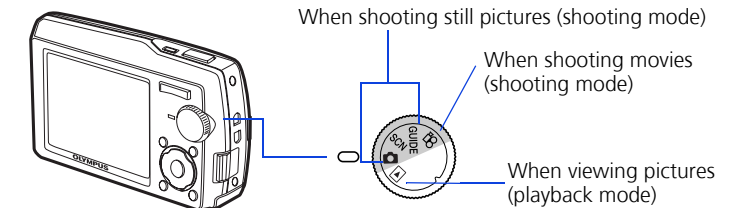

### Still picture shooting modes

- ☺** This function allows you to shoot with the camera's automatic settings.
- SCN** This function allows you to shoot pictures by selecting a scene according to the shooting condition.
- GUIDE** This function allows you to set the target items by following the shooting guide displayed on the screen.

### b. Press the POWER button

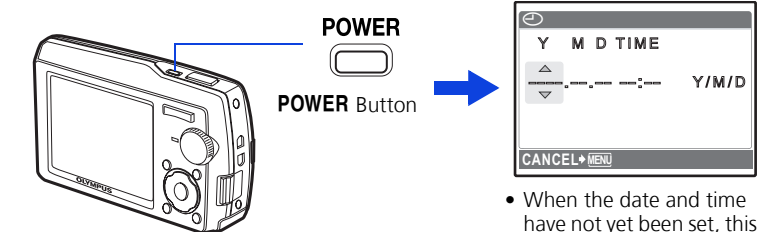


● To turn off the camera, press the POWER button once again.

### Hint

The directions of the arrow pad () is indicated with in the supplied instruction manual.


## 4 Set date and time

### About the date and time setting screen

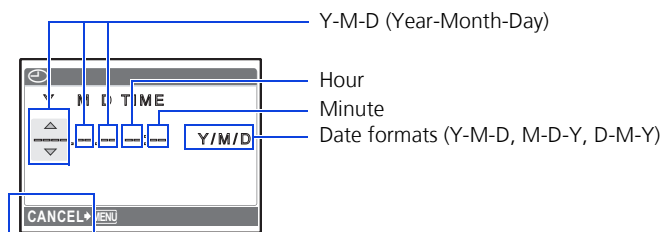


### a. Press the button and the button to select [Y].

● The first two digits of the year are fixed.

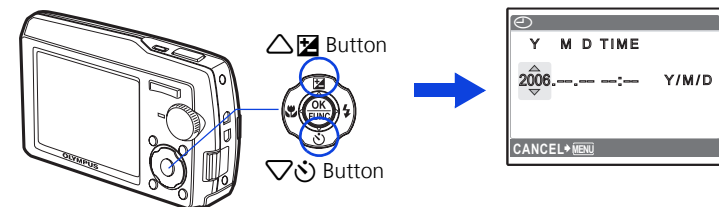

### b. Press the button.

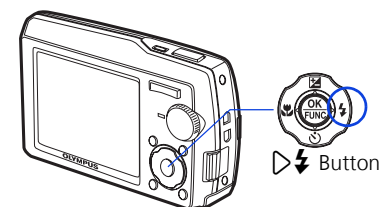

### c. Press the button and the button to select [M].

### d. Press the button.

### e. Press the button and the button to select [D].

### f. Press the button.

### g. Press the button and the button to select "hour", "minute".


● The time is displayed in the 24-hour format.

### h. Press the button.

### i. Press the button and the button to select [Y/M/D].

### j. After all items have been set, press the button.

● For precise time setting, press the button as the time signal strikes 00 seconds.

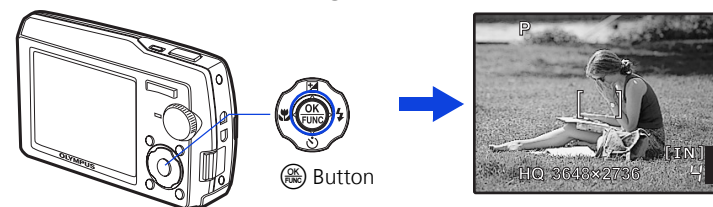


## 5 Take a picture


### a. Hold the camera



### b. Focus

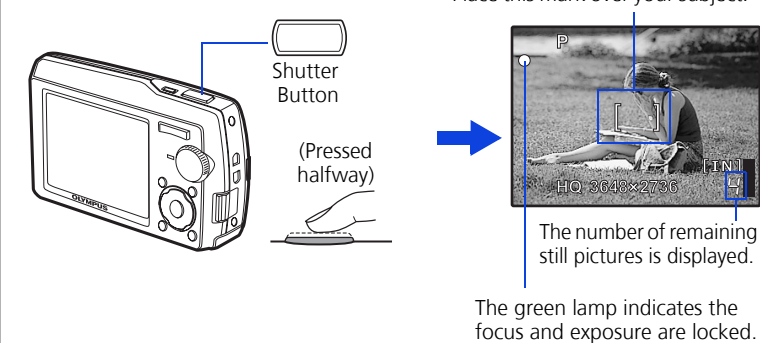


### c. Shoot

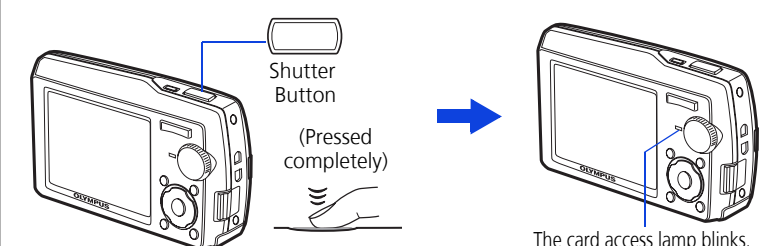

## 6 Review your pictures


### a. Set the mode dial to

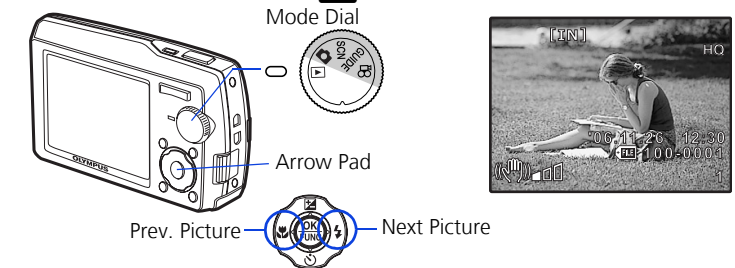

### Erase pictures

### a. As described in a. above, display the picture you want to erase.

### b. Press the button.

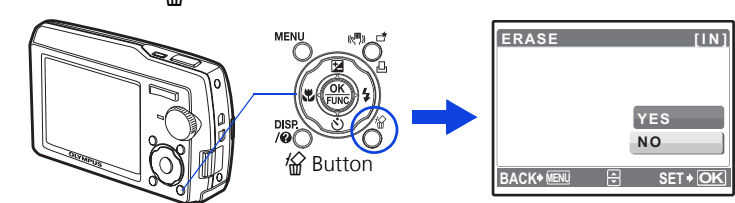

### c. Press the button to select [YES] and press the button to erase the image.

