 


QUICK START GUIDE

Digital Audio Player

MR-F10 Series

OLYMPUS



m:robe

Thank you for purchasing the OLYMPUS digital audio player m:robe MR-F10 Series. This QUICK START GUIDE contains instructions for setup prior to use. You can start using this product immediately after reading this guide. For more details on operations and settings, refer to the supplied "USER'S MANUAL." For inquiries, contact an authorized Olympus service center.

 
User registration

To stay informed of important updates and news regarding your OLYMPUS product, be sure to register your purchase online.

Click [m:robe manager] after inserting the supplied CD-ROM into your PC, then click [OK] on the registration screen to register your purchase.

Checking the contents

m:robe



Mini USB



Earphones embedded necklace



Line-in cable



USB cable



- CD-ROM
- USER'S MANUAL
- QUICK START GUIDE (this guide)
- Warranty card

Trademarks

 
- m:robe is trademark of OLYMPUS CORPORATION.
- Windows is a registered trademark of Microsoft Corporation.

Transferring music to your m:robe

Connecting to your PC/Charging battery (using the USB cable)

Connect your PC and your m:robe.

- 1 Connect the USB cable to your PC and your m:robe. Your PC recognizes your m:robe as a removable disk, and charging starts.

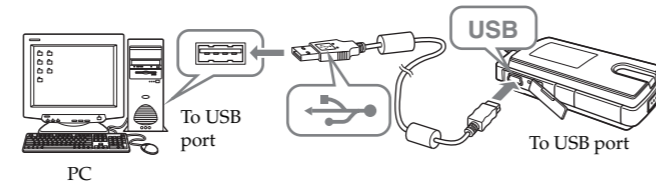

- 2 Transfer files from your PC to your m:robe. Drag and drop the desired file to m:robe on the screen display of your PC.

Notes

- Do not change, on your PC, the names of MUSIC, RECORD, LINE-IN, VOICE or other folders in your m:robe. If you do, it may cause your m:robe to malfunction.
- The maximum number of files you can transfer to your m:robe is 400; the maximum number of folders is 35; the maximum number of hierarchy levels is 5.

The following screen appears after charging completes.



 
Tip

The battery is fully charged after approximately 3 hours.

Disconnecting your m:robe from your PC


For Windows Me/2000/XP users:

- 1 Click [Remove the hardware] on the system tray.
- 2 Click the displayed message.
- 3 [The USB storage device can now be safely removed from the system, remove the USB cable from computer] appears. Click [OK].

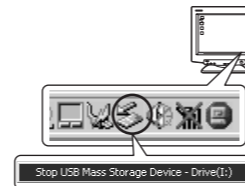

For Windows 98SE users:

 - 1 Double-click [My Computer] icon, then right-click [Removable Disk] to open a pop-up menu.
- 2 Click [Eject] on the menu.

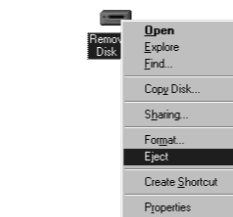


For Macintosh users:

Drag and drop [NO_NAME] icon to [trash box].

The icon to indicate the connection of your PC and m:robe disappears, and your m:robe is disconnected from your PC.



 
Disconnect your m:robe from your PC after the following message is displayed.



Basic Operations

Connecting the earphones embedded necklace

 
Connect the supplied earphones embedded necklace to your m:robe.

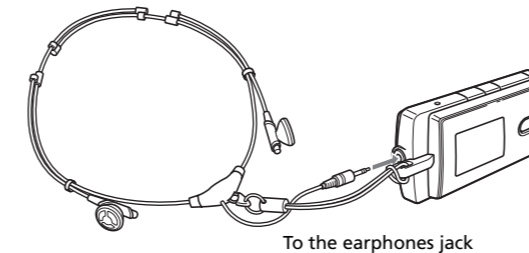

Turning your m:robe on/off

Press the ►/|| button.

 The power is turned on.

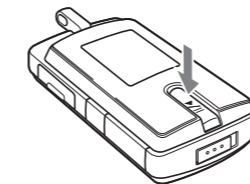


To turn off the power

Press and hold the ►/|| button.

Mode selection

 There are 3 modes, and available functions and setting items differ depending on the selected mode.


- 1 Press and hold the MENU/OK button. The mode select screen appears.
- 2 Press the ◀/▶ button to select the desired mode. The mode changes in the following order.

- 3 Press the MENU/OK button. The desired mode screen appears.

- MUSIC MODE: You can play back music files.
- PLAYLIST: You can play back the registered music files.
- SETTINGS: You can set your m:robe.

Setting the display language

 
You can set a desired display language.

- 1 Press and hold the MENU/OK button. The mode select screen appears.
- 2 Press the ◀/▶ button to select "SETTINGS [⚙️]," then press the MENU/OK button.
- 3 Press the ◀/▶ button to select "Settings," then press the MENU/OK button.
- 4 Press the ◀/▶ button to select "Language," then press the MENU/OK button.
- 5 Press the ◀/▶ button to select the desired language (한국어/ENGLISH/日本語/简体中文/繁體中文), then press the MENU/OK button.



Setting the date and time

 - 1 Press and hold the MENU/OK button. The mode select screen appears.
- 2 Press the ◀/▶ button to select "SETTINGS [⚙️]," then press the MENU/OK button.
- 3 Press the ◀/▶ button to select "Watch," then press the MENU/OK button.
- 4 Press the ◀/▶ button to select "Watch," then press the MENU/OK button.
- 5 Press the ◀/▶ button to select "Setting," then press the MENU/OK button.
- 6 Press the MENU/OK button to select the setting item (year/month/day/hour/minute), then press the ◀/▶ button to adjust.




To display the watch

Select "On/Off" → "On" in step 5, then press the MENU/OK button.

 
Listening to music

Playing back music file

- 1 Press and hold the MENU/OK button.
The mode select screen appears.

- 2 Press the ◀▶ button to select “MUSIC MODE 

The playback screen appears.



- 3 Press the ▶/|| button.
Playback starts.

To control volume

Press the + / - button.

To search the desired music

Press the ◀▶ button.

To pause/resume playback

Press the ▶/|| button.

Searching for a file (Navigation search)


- 1 Press the ↶ button while the playback screen is displayed.
The Navigation search screen appears.

- 2 Press the ◀▶ button to select the desired folder, then press the MENU/OK button.

You can go to the next sublevel of the folder hierarchy.

- 3 Press the ◀▶ button to select the desired file, then press the ▶/|| button.

 Playback starts.




To go back to the previous folder

Press the ↶ button.


To finish Navigation search

Press and hold the ↶ button.

Playing back the playlist

To register to the playlist, refer to “Registering to the playlist” ( page 34) in the USER’S MANUAL.

- 1 Press and hold the MENU/OK button.
The mode select screen appears.

- 2 Press the ◀▶ button to select “PLAYLIST 


The playback screen appears.



- 3 Press the ↶ button.
The Navigation search screen appears.

- 4 Press the ◀▶ button to select the desired music file, then press the ▶/|| button.

 
Playback starts.



Recording music/voice

Recording voice

 
- 1 Press and hold the MENU/OK button.
The mode select screen appears.

- 2 Press the ◀▶ button to select “MUSIC MODE 
 - 3 After pressing the MENU/OK button, press the ◀▶ button to select “REC Source,” then press the MENU/OK button.

- 4 Press the ◀▶ button to select “MIC in,” then press the MENU/OK button.

- 5 Press and hold the REC/A·B button in playback stop mode.

Recording starts.

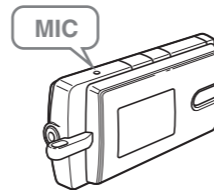

To pause/resume recording

Press the ▶/|| button.

To stop recording

Press the REC/A·B button.


To listen to the recorded voice file

While the playback screen is displayed, press the ↶ button to display the Navigation search screen, select “RECORD” → “VOICE” → the desired voice file, then press the ▶/|| button.


Recording over Line-in connection

- 1 Connect the line-in cable to your m:robe and the external audio device.

 To the audio (Line-out) jack of an external audio device

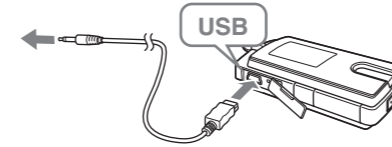

- 2 Press and hold the MENU/OK button.
The mode select screen appears.

- 3 Press the ◀▶ button to select “MUSIC MODE 
 - 4 After pressing the MENU/OK button, press the ◀▶ button to select “REC Source,” then press the MENU/OK button.

- 5 Press the ◀▶ button to select “Line in,” then press the MENU/OK button.

- 6 In playback stop mode, play the external audio device, then press and hold the REC/A·B button.

Recording starts.

To pause/resume recording

Press the ▶/|| button.

To stop recording

Press the REC/A·B button.

To listen to the recorded music file

While the playback screen is displayed, press the ↶ button to display the Navigation search screen, select “RECORD” → “LINE-IN” → the desired file, then press the ▶/|| button.