

**OLYMPUS®**

---

VOICE&MUSIC

**DM-1**

**INSTRUCTIONS**

Thank you for purchasing the Olympus  
Digital Voice Recorder DM-1.

Please read these instructions for information about using  
the product correctly and safely.

Keep the instructions handy for future reference.

---

To ensure successful recordings, we recommend that  
you test the record function and volume before use.

**EN**

# For Safe and Correct Usage

---

Before using your new recorder, read this manual carefully to ensure that you know how to operate it safely and correctly. Keep this manual in an easily accessible location for future reference.

- The warning symbols indicate important safety related information. To protect yourself and others from personal injury or damage to property, it is essential that you always heed the warnings and information provided.

## Using the Online Manual

---

When you install the DSS Player 2000 for DM-1 on your PC from the CD-ROM, you can use an online superset version of this instructions manual, allowing you to learn more about the DM-1 digital voice recorder.

Double-click on the Online Manual shortcut that will appear on the desktop once the DSS Player is installed and open "ONLINE INSTRUCTIONS" to read more about the items listed below.

Uninstall Software .....	21
Assigning Folder Names .....	34
Moving Files Across Folders .....	36
Window Names (DSS Player) .....	44
Play a Voice File .....	47
Upload Voice Files to the DM-1 .....	48
Send Voice Files with E-mail .....	49
Window Names (MusicMatch Jukebox) .....	52
Erasing Music Files .....	58
Changing the User Equalizer (USER EQ) ....	62
System Sounds .....	65
Using the DM-1 as a Reader/Writer .....	71

# General Precautions

---

- Do not leave the recorder in hot, humid locations such as inside a closed automobile under direct sunlight or on the beach in the summer.
- Do not store the recorder in places exposed to excessive moisture or dust.
- Do not use organic solvents such as alcohol and lacquer thinner to clean the unit.
- Do not place the recorder on top of or near electric appliances such as TVs or refrigerators.
- Avoid sand or dirt. These can cause irreparable damage.
- Avoid strong vibrations or shocks.
- Do not disassemble, repair or modify the unit yourself.
- Do not operate the unit while operating a vehicle (such as a bicycle, motorcycle, or go-cart).
- Keep the unit out of the reach of children.

### <Warning regarding data loss>

**Recorded content in memory may be destroyed or erased by operating mistakes, unit malfunction, or during repair work.**

**It is recommended to back up and save important content to other media such as a computer hard disk.**

## Batteries

---

### Warning

- Batteries should never be exposed to flame, heated, short-circuited or disassembled.
- Do not attempt to recharge alkaline, lithium or any other non-rechargeable batteries.
- Never use any battery with a torn or cracked outer cover.
- Keep batteries out of the reach of children.
- If you notice anything unusual when using this product such as abnormal noise, heat, smoke, or a burning odor:
  - ① remove the batteries immediately while being careful not to burn yourself, and;
  - ② call your dealer or local Olympus representative for servicing.

## AC Adapter

---

### Warning

- Do not attempt to disassemble, repair or modify the AC adapter in any way.
- Keep foreign objects including water, metal, or flammable substances from getting inside the product.
- Do not moisten the AC adapter or touch it with a wet hand.
- Do not use the AC adapter in the vicinity of flammable gas (including gasoline, benzene and lacquer thinner).

### In case

- ... the internal parts of the AC adapter are exposed because it has been dropped or

otherwise damaged:

- ... the AC adapter is dropped in water, or if water, metal flammable substances or other foreign objects get inside it:
- ... you notice anything unusual when using the AC adapter such as abnormal noise, heat, smoke, or a burning odor:
  - ① do not touch any of the exposed parts;
  - ② immediately disconnect the power supply plug from the power outlet, and;
  - ③ call your dealer or local Olympus representative for servicing. Continued use of the AC adapter under these circumstances could result in electric shock, fire or injury.

IBM and PC/AT are the trademarks or registered trademarks of International Business Machines Corporation.

Microsoft, Windows and Windows Media are registered trademarks of Microsoft Corporation.

Intel and Pentium are registered trademarks of Intel Corporation.

WOW and  symbol are trademarks of SRS Labs, Inc.

WOW technology is incorporated under license from SRS Labs, Inc.

MusicMatch Jukebox is registered trademark of Music Match, Inc.

Adobe and Acrobat Reader are registered trademarks of Adobe Systems Incorporated.

Other product and brand names mentioned herein may be the trademarks or registered trademarks of their respective owners.



# Main Features

- The DM-1 provides digital voice recording function and also functions as a digital music player function (→ P.11).
- The DM-1 includes the Olympus Voice & Music DM-1 Utility Software, in which the DSS Player software and MusicMatch Jukebox are bundled together.
- Connect the included USB cable to your computer for faster transmission speed.
- Use the DM-1 as a SmartMedia Reader/Writer for fast exchange of other types of data.
- The large LCD screen with backlight can be easily read in daylight or in the dark.

## Main features of the Digital Voice Recorder

- The DM-1 supports two recording modes.
  - You can select SP (Standard Playback) mode or LP (Long Playback) mode (→ P.26). The included 64MB SmartMedia card can store approximately 10 hours and 20 minutes\* of audio data recorded in SP mode, or approximately 22 hours and 10 minutes\* of continuous LP mode recording. If you buy a 128MB SmartMedia card, you can store up to approximately 44 hours and 40 minutes\* of continuous recording on it.
  - \* This is the recording time possible for continuous recording of one file. File names and file-location information take up some storage space, so the actual total recording time that can be stored will slightly decrease as the number of files increases, becoming noticeable if a large number of short recordings are made. (Use the indicated remaining time and recorded time only as references.)
- Can record and play audio files in DSS (Digital Speech Standard) format.
  - An audio signal converted to digital with high-quality data compression can be stored in DSS format.
- The three folders can hold 199 files each, for a maximum of 597 recordings (→ P.21).
- You may assign folder names.
  - A folder name may consist of up to eight characters.

- Recorded files may be moved from one folder to another.
- Has a built-in Variable Control Voice Actuator (VCVA) function (→ P.24-25).
- You can insert or delete index marks (→ P.27).
  - If you insert index marks during recording or playback, you will later be able to quickly find the recording you want to hear.

## Main features of the Digital Music Player

- Can play back music files in MP3 or WMA format.
  - You can play back music files in MP3 or WMA format that you downloaded through the Internet or from audio CDs using the included MusicMatch Jukebox.
  - With one 64MB SmartMedia card, you can store approximately 50 minutes to 2 hours of music data. (The total storage time will vary depending on the bit rate of each music file.)
- Uses a multidecoder system (→ P.60).
- Has built-in WOW (→ P.50-51).
  - WOW, a product of sound-compositing technology developed by SRS Labs, Inc., is installed. WOW produces surround sound with rich bass and sharp, clear sound contours.
- You can change the playback equalizer settings (→ P.48).

# Table of Contents

## Getting Started

Operating Environment .....	6	Switching Between the Voice Recorder and Music Player .....	11
SmartMedia .....	7	Inserting and Ejecting SmartMedia cards ...	12
Identification of Parts .....	8	Setting Time/Date .....	14
Inserting Batteries .....	10	Installing Software .....	16
Using the AC Adapter .....	11		

## When Using the DM-1 as a Voice Recorder

Recording .....	21	Index Marks .....	27
Microphone Sensitivity .....	23	Playing .....	28
Using the Variable Control Voice Actuator (VCVA) .....	24	Erasing .....	30
Recording Modes .....	26	Locking Files .....	32
		Menu List (VOICE MODE) .....	33

VOICE

## Managing Files on Your PC

Using DSS Player .....	34	Running DSS Player .....	38
Connecting to Your PC .....	36	Import Voice Files to Your PC .....	40

## Using the DM-1 as a Music Player

Using the DM-1 as a Music Player .....	42	Locking Music Files .....	49
Using MusicMatch Jukebox .....	42	Increasing the WOW effect .....	50
Transferring Music Files to the DM-1 .....	44	Menu List (MUSIC MODE) .....	52
Music Playback .....	46		

MUSIC

## Features Common to the Voice Recorder and Music Player

Alarm Playback Function .....	53	Hold .....	57
Formatting SmartMedia .....	55	Reset .....	57
Backlight .....	56		

## Other Information

Alarm Message List .....	58	Specifications .....	62
Troubleshooting .....	59	Technical Assistance and Support .....	63
Accessories (optional) .....	61		

# Operating Environment

---

## PC Requirements

PC: IBM PC/AT compatible PC

Operating System: Microsoft Windows 98/ 98SE/ Me /2000 Professional/  
XP Professional, Home Edition

Hardware Requirements:

Minimum:

CPU: Intel Pentium class 200MHz processor or better

RAM: 32MB or more

Hard drive space: 70MB or more (plus space for sound data files)

Drive: 4x CD-ROM drive

Sound card : Creative Labs Sound Blaster 16 or 100% compatible sound card

Audio I/O terminals: earphone output or speaker

Display: SVGA or higher color video display card (minimum resolution 800x600)

USB port: One free port

Browser: Microsoft Internet Explorer 4.01 or later

Internet connection

Recommended:

CPU: Intel Pentium II class 300MHz MMX or better

RAM: 64 MB or more

Hard drive space: 70 MB or more

Drive: 12x CD-ROM drive

Sound card : Creative Labs Sound Blaster 16 or 100% compatible sound card

Audio I/O terminals: earphone output or speakers

CD-Writer (for creating audio CDs)

Display: 16-bit color video card

USB port: One free port

High-speed Internet connection and Web browser (Microsoft Internet Explorer 5.0 or later)

Windows Media player 7 or later

## Notes

- USB ports are not available on PCs running Windows 95 or that have been upgraded from Windows 95 to any other OS. An optional PC Card adapter or floppy disk adapter is needed to download audio files to such PCs.
- Certain functions, such as remote and direct recording, do not work on PCs that don't have USB ports.
- While installing MusicMatch Jukebox, avoid running other applications which are writing to the hard drive simultaneously with installation. Certain configurations, which cause the operating system to become unstable, such as low memory or multiple open windows, will also affect recording quality.

# SmartMedia

## What is SmartMedia?

SmartMedia is a type of removable IC memory card. With more memory than a floppy disk, SmartMedia cards facilitate data exchange with personal computers, and can be used to store data.

## SmartMedia that can be used with the DM-1

If the included 64MB SmartMedia card is not enough, please purchase another SmartMedia card.

The following types of SmartMedia cards can be used with the DM-1.

Voltage: 3.3 V or 3V

Memory Size: 4MB\*, 8MB\*, 16MB, 32MB, 64MB, 128MB

When using the DM-1 as a digital music player, for copyright protection, a SmartMedia card without an ID function cannot be used.

\* Many of the 4MB and 8MB SmartMedia cards available in stores do not have the ID function.

## Notes

- Commercial 5 V SmartMedia cards cannot be used.
- When using the DM-1 as a digital voice recorder, a SmartMedia card without an ID function can be used, since this does not involve copyrighted recordings.
- **Never use SmartMedia cards with products that are not compliant with the SSFDC Forum\* (including certain models of MP3 players).**

\* The SSFDC Forum is a voluntary organization committed to promoting SmartMedia as a de facto standard in the industry. The DM-1 adheres to a format recommended by the SSFDC Forum.

## Memory Sizes of SmartMedia Cards and Approximate Recording Times

When using as a voice recorder \*

Memory Size	SP Mode	LP Mode
4MB	30 min.	1 hr. 10 min.
8MB	1 hr. 10 min.	2 hr. 35 min.
16MB	2 hr. 30 min.	5 hr. 20 min.
32MB	5 hr. 05 min.	11 hr. 00 min.
64MB	10 hr. 20 min.	22 hr. 10 min.
128MB	20 hr. 50 min.	44 hr. 40 min.

\* Recording time is calculated using a single speech file recorded continuously. If speech files are recorded intermittently, recording time may be shorter than indicated.

When using as a music player \*\*


Memory Size	Possible recording time
16MB	12 to 30 minutes
32MB	25 to 60 minutes
64MB	50 minutes to 2 hours
128MB	1 hour and 40 minutes to 4 hours

(when the bit rate is between 160 kbps and 64 kbps)

\*\*The possible recording time varies depending on the bit rate of the music files. For example, a file with a higher bit rate produces better sound quality; however, the total possible recording time with such files will be shorter.

### Write-protect SmartMedia

A write-protect seal (supplied with SmartMedia card) can be attached to a SmartMedia card to guard against accidental recording, erasing, and formatting.

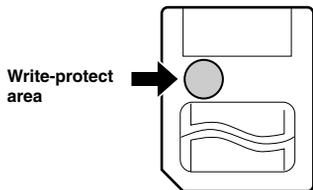


Attach the write-protect seal to the write-protect area to prevent valuable data from being erased accidentally.

Remove the write-protect seal before recording or erasing.

### Notes



- Attach the write-protect seal to the write-protect area carefully, without letting the seal stick out, lift, or peel.
- Do not use commercial seals.
- Write-protect seals cannot be reused.
- A dirty write-protect seal may disable the write-protect feature. Wipe it with a soft, dry cloth.
- A SmartMedia card with a write-protect seal attached to it may not be write-protected when using the card with other products.

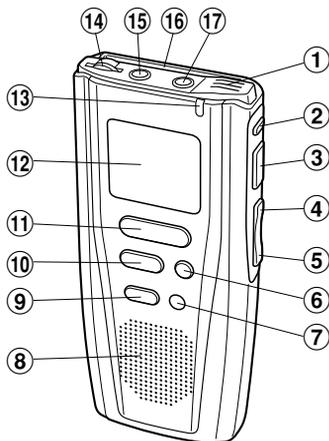

- ① **Built-in microphone\***
- ② **FOLDER button\*, REPEAT button\*\***
- ③ **PLAY button**
- ④ **FF (Fast Forward) /+ button**
- ⑤ **REW (Rewind) /- button**
- ⑥ **INDEX button\*/EQ (Equalizer) button\*\***
- ⑦ **ERASE button**
- ⑧ **Built-in speaker**
- ⑨ **MENU button**
- ⑩ **STOP button**
- ⑪ **REC (Record) button\***
- ⑫ **Display (LCD panel)**
- ⑬ **Record/Play indicator lamp**

\* applicable for Voice recorder  
 \*\* applicable for Music player

## Display (LCD Panel)

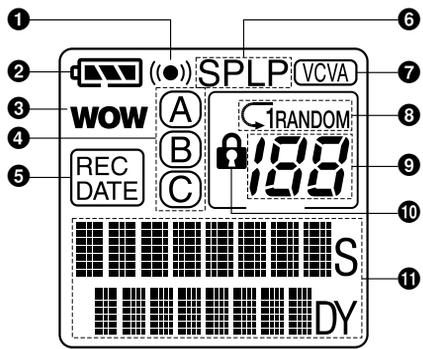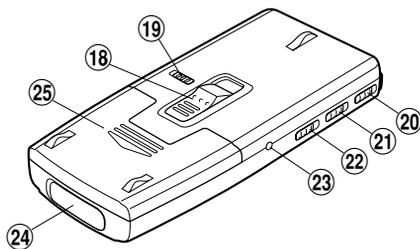


- ⑭ **VOLUME** control
- ⑮ **Microphone jack**\*
- ⑯ **SmartMedia** slot
- ⑰ **Earphone jack**
- ⑱ **SmartMedia** ejection switch
- ⑲ **POWER/LOCK** switch
- ⑳ **MODE** switch
- ㉑ **MICSENS** (Microphone sensitivity) switch\*
- ㉒ **HOLD** switch
- ㉓ **Power jack**
- ㉔ **PC (USB)** terminal
- ㉕ **Battery cover**


- ① **Alarm indicator**
- ② **Battery indicator**
- ③ **WOW indicator**\*\*
- ④ **Folder**\*
- ⑤ **Recording Date/Time indicator**\*
- ⑥ **Record mode indicator**\*
- ⑦ **VCVA**(Variable Control Voice Actuator) indicator\*
- ⑧ **Repeat, Random play indicator**\*\*
- ⑨ **Current file**
- ⑩ **Erase lock indicator**
- ⑪ **Data, Alarm indicator**

\* applicable for Voice recorder  
 \*\* applicable for Music player


# Inserting Batteries

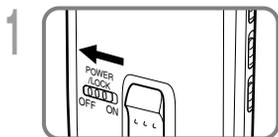


1 Set the **POWER/LOCK** switch to **OFF**.

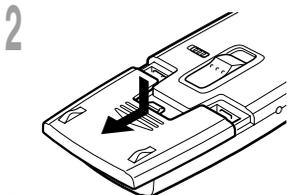

2 Lightly press down on the arrow and slide the battery cover open.

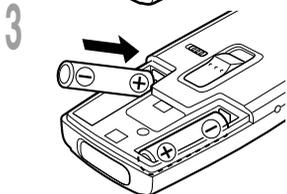


3 Insert two AAA alkaline batteries, observing the correct polarity.

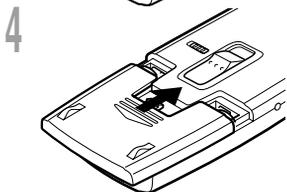

4 Close the battery cover completely.

## Replacing batteries

The battery indicator on the display changes as the batteries lose power.



When  appears on the display, replace the batteries as soon as possible.

When the batteries are too weak, the recorder shuts down and "BATTERY LOW" appears on the display. AAA alkaline batteries are recommended.


**An optional Ni-MH Rechargeable Battery from Olympus can be used for the recorder (→ P.61). However, the battery level may not be indicated correctly when the Ni-MH Rechargeable battery is used.**

## Notes

- Be sure to set the **POWER/LOCK** switch to **OFF** position when replacing batteries. Unloading the batteries while the recorder is recording, erasing or otherwise accessing an audio or a music file may corrupt the file.
- Be sure to replace both batteries at the same time.
- **Never mix old and new batteries, or batteries of different types and/or brands.**
- If it takes longer than 3 minutes to replace dead batteries, the internal rechargeable backup battery will be exhausted, so you may have to reset the time when you load fresh batteries (→ P.14-15).
- Remove the batteries if you are not going to use the recorder for an extended period of time.

## Using the AC Adapter


Plug the optional AC adapter (Olympus Model A321 or A322) into household power outlet and connect the power plug to the recorder's power connector (DC 3 V) as shown in the illustration. Always stop recording before connection. Otherwise it may not be possible to play back the voice data being recorded.

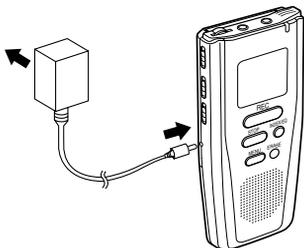

- Always stop recording before connection or disconnection.
- When the AC adapter is not in use, disconnect the power supply plug from the power outlet.
- Use only the correct power supply voltage as indicated on the adapter.
- Do not use the AC adapter when connecting the recorder to the USB port.

## Switching Between the Voice Recorder and Music Player

The DM-1 has a voice recorder and a music player.

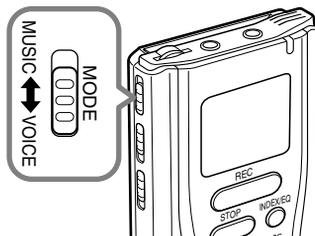

Using the **MODE** switch, choose between the **VOICE** or **MUSIC** positions.

**VOICE** : For recording or playing back voice recordings.

**MUSIC** : For listening to music files.

### Meaning of icons in this manual



Set the **MODE** switch to **VOICE** before operating the DM-1.



Set the **MODE** switch to **MUSIC** before operating the DM-1.




Convenient features that can be used with both the Voice Recorder and Music Player.

# Inserting and Ejecting SmartMedia cards

## Inserting SmartMedia cards

Insert the SmartMedia card into the slot as shown below.

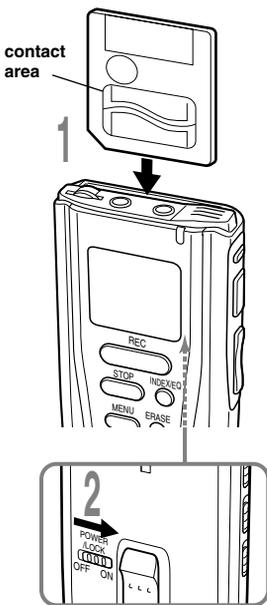

### 1 Insert the SmartMedia in the correct direction.


Push the SmartMedia card fully into position.

### 2 Set the **POWER/LOCK** switch to **ON**.

The display appears.


#### SmartMedia inserted fully into the slot

When you set the POWER/LOCK switch to the ON position, "PLEASE WAIT" flashes on the display for several seconds.

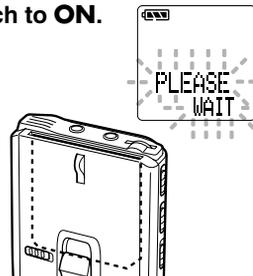

#### SmartMedia not inserted fully into the slot


When you set the POWER/LOCK switch to the ON position, "INSERT CARD" flashes on the display for several seconds. Pressing any button with no SmartMedia card inserted causes "INSERT CARD" to appear again. Push the SmartMedia card fully into position.

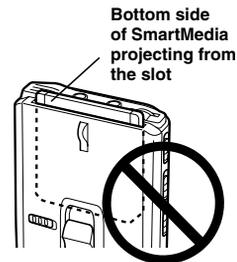

## Notes

- If an unformatted SmartMedia card is inserted, "FORMAT YES?" will display automatically. Format the SmartMedia card (→ P.55).
- Never use any SmartMedia card other than one that has been formatted on this unit or on a CAMEDIA series Olympus digital camera (→ P.55).

## Ejecting SmartMedia cards

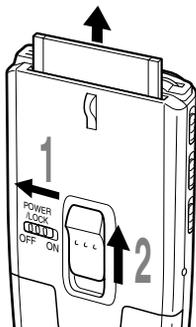

### 1 Set the **POWER/LOCK** switch to **OFF**.

The display disappears.

### 2 Raise the SmartMedia ejection switch.

#### Note

The SmartMedia ejection switch will not work if the POWER/LOCK switch is set to ON.

#### Attention



- **SmartMedia cards are precision devices. Never force the cards when inserting them, or subject them to sharp blows.**
- **Avoid handling and storing SmartMedia cards in a hot, damp environment.**
- **Do not touch the contact area (gold electrodes) of the SmartMedia card with bare hands.**  
If a SmartMedia card gets dirty, wipe it with a soft, dry cloth.
- **SmartMedia cards may be vulnerable to electrostatic data corruption. When carrying a SmartMedia card, put it in its case.**  
Remember to back up data from SmartMedia cards to a PC or other storage medium from time to time (→ P.40-41).
- **Corrupted, lost, or erased data cannot be restored.**

# Setting Time/Date

If you have set the time and date, information as to when an audio or a music file is recorded is stored automatically with that file. The time and date should be set to ease file management tasks. The time and date setting is also needed to perform the alarm playback function (→ P.53-54).

**The hour indicator will flash automatically when you load batteries before using the recorder for the first time, or after the recorder hasn't been used for a long time. Proceed from step 4.**

## Time/DateScreen

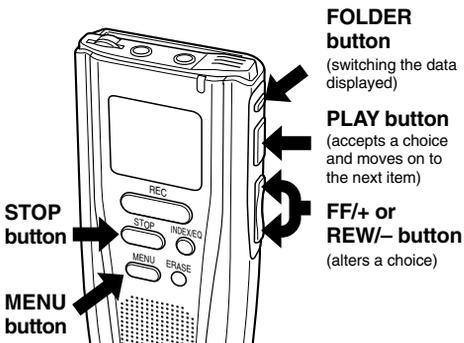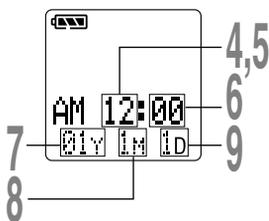


## Changing the Time/Date

**1 Set the POWER/LOCK switch to ON.**

**2 Press the MENU button.**

The menu opens (→P.33,52).

**3 Press the FF/+ or REW/- button to choose the Time/Date setup screen.**

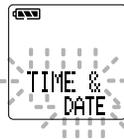

**4 Press the PLAY button.**

Time/Date screen appears. The hour indicator flashes, indicating the start of the Time/Date setup process.

- While you are setting the hour and minute, each time the FOLDER button is pressed, the time indicator will alternate between 12-hour and 24-hour time.

Example: 5:45 P.M.

PM 5:45 ↔ 17:45

## 5 Set the hour.

- ① Press the FF/+ button or REW/- button to set the hour.
- ② Press the PLAY button to accept the hour.

## 6 Set the minute.

- ① Press the FF/+ button or REW/- button to set the minute.
- ② Press the PLAY button to accept the minute.

## 7 Set the year.

- ① Press the FF/+ button or REW/- button to set the year.
- ② Press the PLAY button to accept the year.

- While you are setting the date, each time the FOLDER button is pressed, the order of the year, month, and day will change.

Example: June 20, 2001

01Y	6M	20D	←
	↓		
6M	20D	01Y	
	↓		
20D	6M	01Y	↪

## 8 Set the month.

- ① Press the FF/+ button or REW/- button to set the month.
- ② Press the PLAY button to accept the month.

## 9 Set the date.

- ① Press the FF/+ button or REW/- button to set the date.
- ② Press the PLAY button to accept the date.

## 10 Press the STOP button to end.

This completes the Time/Date setup procedure.

### Note

If you press the STOP button during the setup operation, the clock will use the items that were set to that point.

# Installing Software

Before you connect the USB cable to the DM-1 and your PC, you must first install the software. In order to listen to music files, you must have MusicMatch Jukebox installed.

## Be sure to confirm the following before installation:

- Exit all running applications.
- Eject the floppy disk if you are using one.
- You will need to input the licence number, so have the license number ID card handy.
- If you are running Windows 2000 on a network, you need to log on as an administrator.

## 1 Insert Olympus Voice & Music DM-1 Utility Software into the CD-ROM drive.

The installation program will start automatically. Once the program starts, jump to step 4. If it does not, follow the procedures in steps 2 and 3.

## 2 Click on the [Start] button and select [Run].

## 3 Enter "D:\Setup.exe" in the [Open] field and click on <OK>.

This is assuming the CD-ROM is in drive D.

## 4 The installation Language Selection dialog box opens.

Click on the desired language to select it.

## 5 Click on <Next> when the Olympus Voice & Music DM-1 Utility Software opening screen appears.

## 6 Confirm the licensing agreement.

You must accept the terms of the License agreement to install the Olympus Voice & Music DM-1 Utility. If you accept them, click on <Yes>.

## 7 Select the installation destination directory.

If you wish to select the installation destination for the Olympus Voice & Music DM-1 Utility Software, click on <Browse> to find the desired installation destination. If you do not want to change it, simply click on <Next>.

## 8 Installation Procedure screen.

To install software of your choice select <Custom>. To install both DSS Player and MusicMatch Jukebox, select <Standard> then click on <Next>.

If you selected <Standard>, skip to step 10.

**9 Select the software to install.**

Check the check box for the necessary software, then click on <Next>.

**Note**

If the DSS Player and MusicMatch Jukebox software are already installed, the check boxes will be checked. If you uncheck the boxes, the software may be deleted.

**10 Confirm the start of file copying.**


Confirm all Current Settings. To accept them, click <Next>.

**11 If not currently installed on your PC, install Acrobat Reader.**

When the Acrobat Reader installation dialog box opens, select Install Adobe Acrobat Reader and click on <Next>.

**Note**

Installing Acrobat Reader allows you to view detailed operating instructions for DSS Player.

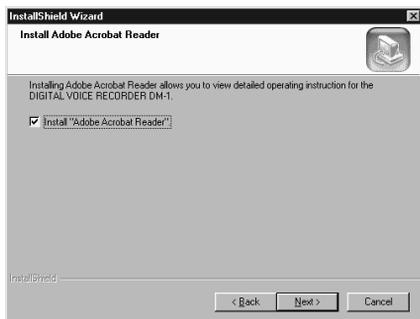**12 Click on <Next> when Olympus DSS Player 2000 for DM-1 Setup appears.**

If you selected <Custom> and unchecked DSS Player, skip to step 18.

**13 Confirm your acceptance of the terms of the Licensing Agreement.**

You must accept the terms of the Licensing Agreement to install DSS Player. If you accept them, click on <Yes>.

**14 Select where to install DSS Player.**

This lets you specify the folder in which to install DSS Player. Click on <Browse> to find the desired installation folder. To accept the default folder, click on <Next>.

**Note**

If the installation folder does not exist, a confirmation dialog box opens to get your permission to create a folder for this purpose. Click on <Yes>.

**15 Select a program menu folder.**

You may change the program menu folder to another one, such as [Start Up]. To accept the default folder, click on <Next>.

**16 Authorizing the start of file copying.**

Confirm all "Current Settings". To accept them, click on <Next>.

**Note**

To change the program menu folder or installation folder, click on <Back>.

- 17 Copy files.**  
Wait until DSS Player is installed on your PC, then click on <Finish>.
- 18 Install MusicMatch Jukebox.**  
If you selected <Custom> and unchecked the music utility check box, skip to step 31.
- 19 Click on <Next> when the Welcome screen appears.**
- 20 Confirm acceptance of the terms of the Licensing Agreement.**  
You must accept the terms of the Licensing Agreement to install MusicMatch Jukebox. If you accept them, click on <Yes>.

- 21 User registration information.**  
A MusicMatch USA user registration form will appear on the screen. If you have an e-mail address, we recommend that you register online. If not, uncheck the “Recommended options”, type in your name and age, “a@a.a” for the section asking for an e-mail address, and the country you live in. Then click on <Next>.

The screenshot shows a dialog box titled "User Registration Info" with a close button (X) in the top right corner. The dialog contains the following text and fields:

Please complete the software registration form below. Several fields are optional, but completing all fields will help us provide a customized music experience.

**PRIVACY GUARANTEE:** Your name and e-mail address will never be shared outside of MUSICMATCH without your permission. See our complete privacy policy at [www.musicmatch.com/privacy](http://www.musicmatch.com/privacy).

Year of Birth: 19  We must know your age to comply with U. S. laws protecting the privacy of persons under age 13.

\* Name:  (Not collected from persons under 13)

\* E-mail:  (Not collected from persons under 13)

\* Country:  (dropdown menu)

Postal / Zip Code:

Gender:  (dropdown menu)

**Recommended options:**

- Register electronically
- Send me music-related news and special offers


\* Required fields for persons age 13 and over

Buttons:

## 22 Select the Personal Music Recommendations.

If you plan to use the Personal Music Recommendation, click on <Yes [recommended]>, if not, select <No>, then click on <Next>.

Refer to the Personal Music Recommendation screen for the features and contents.

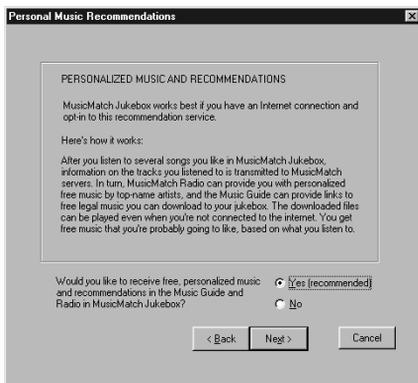

## 23 Set the Install Option.

If you would like to set up a special environment to meet your needs, check <Custom>. If you don't want to make any changes, check <Express [recommended]>. Then click on <Next>. If you checked <Express [recommended]>, skip to step 29.

## 24 Select where to install MusicMatch Jukebox.

Click on <Browse> if you want to change the MusicMatch Jukebox installation folder. To accept the default folder, click on <Next>.

## 25 Select the folder in which to save music files.

Click on <Browse> if you want to change where to save your music files. To accept the default folder, click on <Next>.

### Note

If the installation folder does not exist, a confirmation dialog box opens to get your permission to create a folder for this purpose. Click on <Yes>.

- 26 Select a program menu folder.**

You may change the program menu folder to another one, such as [Start Up]. To accept the default folder, click on <Next>.
- 27 MusicMatch Jukebox Shortcuts.**

It is possible to create shortcuts in three locations. Check the boxes for any shortcuts you want to create, then click on <Next>.
- 28 File type Registration.**

Check the appropriate boxes to associate music files with MusicMatch Jukebox, then click on <Next>. Association means to run the application that corresponds to the filename extension.
- 29 Copy files.**

Wait until MusicMatch Jukebox is installed on your PC.
- 30 Completing setup.**

Uncheck "Run MusicMatch Jukebox now", then click on <Finish>.
- 31 Set up Acrobat Reader.**

When the Acrobat Reader Setup dialog box opens, click on <Next>.
- 32 Select where to install Acrobat Reader.**

Specify the folder in which to install Acrobat Reader. To accept the default folder, click on <Next>.
- 33 Setup Status.**

Wait until Acrobat Reader is installed on your PC.
- 34 Exit Acrobat Reader setup.**

When the Exit Setup dialog box opens, click on <OK>.
- 35 Install Shield Wizard complete.**


You may be requested to restart your PC when setup is complete. If so, make sure that "Yes, I want to restart my PC now." is selected before clicking on <Finish>. Then, when the message to do so appears, shut your PC off and restart it.

# When Using the DM-1 as a Voice Recorder




## Recording

The recorder provides three folders, **[A]**, **[B]**, and **[C]**, and each message recorded in a folder is saved as a Digital Speech Standard (DSS) file. These three folders can be selectively used to distinguish the kind of recording; for example, folder **[A]** might be used to store private information, while folder **[B]** might be dedicated to holding business information. Up to 199 messages can be recorded per folder.

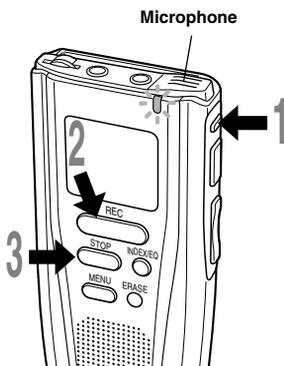

### 1 Press the **FOLDER** button to choose a folder.


The folder name is displayed for approximately 2 seconds.



- (a) Current file number
- (b) Folder name
- (c) Total number of recorded files in the folder

### 2 Press the **REC** button to start recording.

The record/play indicator lamp glows red. Aim the microphone at the sound source.



- (d) Current recording time
- (e) Remaining recording time

### 3 Press the **STOP** button to stop recording.

### Notes

- A beep will sound when remaining recording time reaches 60 seconds, 30 seconds, and 10 seconds while recording.
- “MEMORY FULL” or “FOLDER FULL” will be displayed when the memory or file capacity is full. Delete any unnecessary files before recording any further (→P.30).
- Using the DSS Player, it will be possible to transfer voice files to your computer and store on your hard disk (→P.40-41).

## Pause Recording

---

### Pause

Press the **REC** button while recording.

- ➡ “REC PAUSE” will flash on the display.
- The recorder stops when it has been left paused for 10 minutes or longer.

### Resume Recording

Press the **REC** button again.

- ➡ Recording will resume at the point of interruption.


## Listening While Audio Is Recorded (Recording Monitor)

Insert the earphone into the earphone jack to monitor what is being recorded. (The volume is fixed.)



# Microphone Sensitivity

Microphone sensitivity is adjustable to meet recording needs.

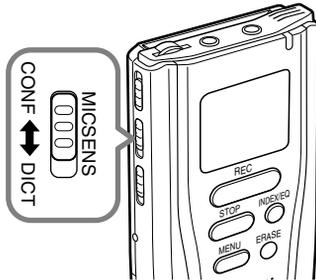

Using the **MICSSENS** switch, choose between the **CONF** and **DICT** positions.

**CONF** : High-sensitivity mode that records sounds in all directions.

**DICT** : Low-sensitivity mode suited for dictation.

## Notes

- If you want to clearly record a speaker, switch to DICT mode and place the internal microphone close (5 to 10 cm) to the speaker.
- If the ambient (background) noise is too loud to get a clear recording even in DICT mode, we recommend that you use an ME-12 single directional microphone (sold separately).




# Using the Variable Control Voice Actuator (VCVA)

When the microphone senses that sounds have reached a preset volume, the built-in Variable Control Voice Actuator (VCVA) starts recording automatically, and stops when the volume drops. Particularly helpful for extended recording, the VCVA not only conserves memory by turning off recording during silent periods, but also makes playback more efficient and convenient.


VOICE

Using the Variable Control Voice Actuator (VCVA)

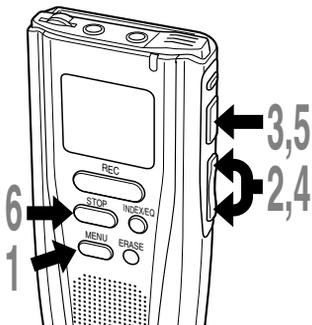


- 1 Press the **MENU** button.**  
The menu opens (→ P.33).
- 2 Press the **FF/+** or **REW/-** button to open the VCVA setup screen.**
- 3 Press the **PLAY** button.**  
The VCVA setup process begins.
- 4 Press the **FF/+** or **REW/-** button to choose between **ON** and **OFF**.**  
ON : Will start recording in VCVA mode.  
OFF : Will resume recording in normal mode.
- 5 Press the **PLAY** button to complete the setup process.**
- 6 Press the **STOP** button to close the menu.**  
When ON is selected, a **VCVA** indication will be displayed on the upper-right corner of the screen.



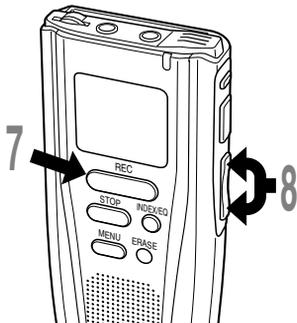

## 7 Press the **REC** button to start recording.

When the sound volume is lower than the preset pause sound level, recording automatically pauses after approximately 1 second, and “STANDBY VCVA” flashes on the display. The record/play indicator lamp glows when recording starts and flashes when recording pauses.

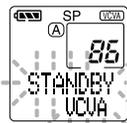

## 8 Press the **FF/+** or **REW/-** button to adjust the pause sound level during recording.

The pause sound level can be set to any of 15 different values. The higher the value, the higher the sound sensitivity. At the highest setting, even a small sound will activate recording.



The VCVA pause sound level can be adjusted according to the ambient (background) noise.

To ensure successful recordings, prior testing and adjustment of the start/stop actuation level is recommended.

### Note


The start/stop actuation level also varies depending on the selected microphone sensitivity mode (→ P.23).



# Recording Modes

You can choose between two recording modes: SP (Standard Playback) mode and LP (Long Playback) mode.

The included 64MB SmartMedia card holds approximately 10 hours and 20 minutes in SP mode and approximately 22 hours and 10 minutes in LP mode.

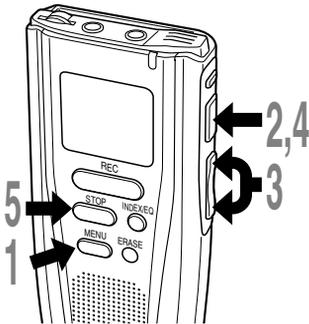

**1 Press the MENU button.**  
“REC MODE” will be displayed on the screen (→ P.33).



**2 Press the PLAY button.**  
The recording mode setup process begins.

**3 Press the FF/+ or REW/- button to choose between SP and LP.**



**4 Press the PLAY button to complete the setup process.**

**5 Press the STOP button to close the menu.**

---


## Note

Choose SP mode for recording meetings or lectures with crisp clarity.



# Index Marks


Index marks can be incorporated into a file during recording or playback to make it easy to locate interesting information. Index marks enable faster access to important information by pressing the FF/+ or REW/- button.

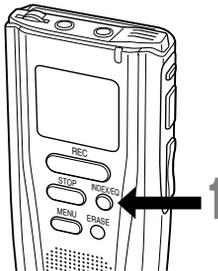

## Setting an Index Mark


- 1 Press the **INDEX** button during recording or playback to set an index mark.

An index mark is set and the index number appears on the display.



VOICE

Index Marks

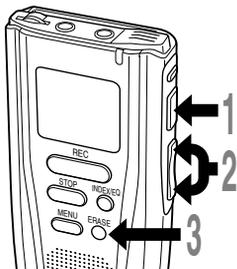

## Clearing an Index Mark

- 1 Play the file with the index mark you want to clear.
- 2 Press the **FF/+** or **REW/-** button to choose the index mark to be cleared.
- 3 Press the **ERASE** button while the index number appears for approximately 2 seconds on the display.

The index mark is erased.



Index numbers are reassigned automatically.


### Notes

- Up to 16 index marks can be set in a file. Attempting to set more index marks will cause "INDEX FULL" to appear on the display.
- Index marks cannot be set or cleared in a file stored on a SmartMedia card with a write-protect seal attached to it (→ P.8).
- Index marks cannot be set or cleared in a locked file (→ P.32).




# Playing

VOICE  
Playing

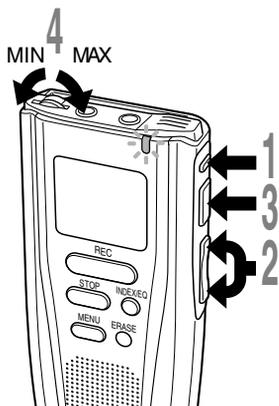


1 Press the **FOLDER** button to choose a folder.



2 Press the **FF/+** or **REW/-** button to choose the file that you want to play\*.

The time and date when the file was recorded are displayed for approximately 2 seconds.




a Recorded time and date of the selected file

3 Press the **PLAY** button to start playback.

The record/play indicator lamp glows green.



4 Adjust the **VOLUME** control to your liking.



b Elapsed time for the file being played back  
c Total file play time

The recorder stops automatically when it finishes playing each file.

\* If you hold the FF/+ or REW/-, files are skipped continuously (continuous skip).

## Note

Playback in Voice mode will be in mono, not stereo.

## Playback Functions

### Skip a File While Playing It

Press the **FF/+** button while playing a file.

- ➡ The recorder skips to the beginning of the next file and starts playing it\*.

Press the **REW/-** button while playing a file.

- ➡ The recorder skips to the beginning of the current file and starts playing it\*.

\* If an index mark is encountered midway (→ P.27), playback begins at that position.

### Fast Playback

Hold the **PLAY** button for 1 second or longer while playing a file.

- ➡ The recorder plays back at approximately 50% faster than the normal rate.
- After fast playback is canceled, playback returns to normal rate.

### Canceling Fast Playback

Hold the **PLAY** button for 1 second or longer again.

- ➡ Playback returns to normal rate.

### Cue (Fast Forward While Playing)

Hold the **FF/+** button while playing a file.

- The recorder stops when it reaches the end of the file. Continue pressing the **FF/+** button to proceed with the cue from the beginning of the next file.
- If an index mark is encountered in the middle of the file, the recorder stops at that point, but will proceed with the cue when the **FF/+** button is still pressed.

### Canceling a Cue

Release the **FF/+** button where you want the file played.

- ➡ Playback begins.

### Review (Fast Rewind While Playing)

Hold the **REW/-** button while playing a file.

- The recorder stops when it reaches the beginning of the file. Continue pressing the **REW/-** button to proceed with the review from the end of the next file.
- If an index mark is encountered in the middle of the file, the recorder stops at that point, but will proceed with the review if the **REW/-** button is still pressed.

### Canceling the Review

Release the **REW/-** button where you want the file played.

- ➡ Playback begins.

### Canceling Playback

Press the **PLAY** or **STOP** button.

- ➡ The file being played will stop midway.




# Erasing

## Erasing One File at a Time

A selected file can be erased from a folder.

VOICE  
Erasing

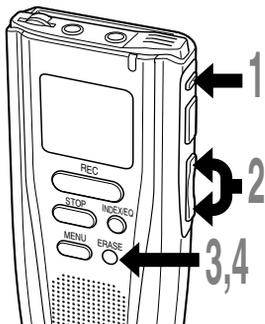


**1 Press the FOLDER button to choose a folder.**



(a) Current folder

**2 Press the FF/+ or REW/- button to choose the file you want to erase.**

**3 Press the ERASE button.**  
“FILE ERASE?” flashes on the display for approximately 8 seconds.

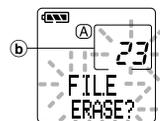

(b) File to be erased

**4 Press the ERASE button once more when “FILE ERASE?” is flashing.**  
The display lights continuously to indicate erasing has started.




“ERASE OK” is displayed when the file is erased. File numbers are incremented automatically.

### Notes


- If the ERASE button is not pressed within the 8 seconds after “FILE ERASE?” starts flashing, the DM-1 will revert to stop status.
- An erased file cannot be restored.
- Locked files cannot be erased (→ P.32).
- Files stored on a SmartMedia card with a write-protect seal attached to it cannot be erased (→ P.8).

## Erase All Files from a Folder

All files in a folder can be erased simultaneously, except for locked files (→ P.32).

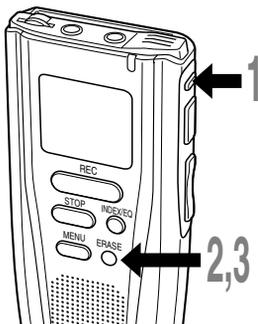

**1 Press the FOLDER button to choose the folder in which you want to erase all files.**



**a Folder from which to erase files**

**2 Press the ERASE button for 3 seconds or longer.**  
“ALL ERASE?” flashes on the display for approximately 8 seconds.



**3 Press the ERASE button once more when “ALL ERASE?” is flashing.**  
The display lights continuously to indicate erasing has started.



“ERASE OK” is displayed when the files are erased. Locked files are reassigned file numbers in ascending order.

### Notes

- If the ERASE button is not pressed within the 8 seconds after “ALL ERASE?” starts flashing, the DM-1 will revert to stop status.
- It might take more than 10 seconds to complete erasing tracks. Do not eject the SmartMedia card before erasing is finished.
- Files stored on a SmartMedia card with a write-protect seal attached to it cannot be erased (→ P.8).

**VOICE**

Erasing




# Locking Files


Locking a file keeps important data from being accidentally erased.  
Locked files are not erased when you choose to erase all files from a folder (→ P.31).

VOICE

Locking Files

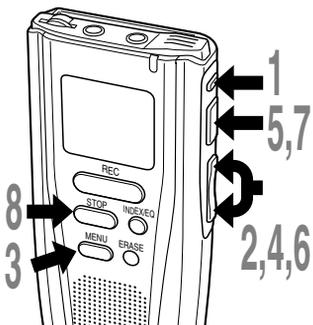


- 1 Press the **FOLDER** button to choose a folder.
- 2 Press the **FF/+** or **REW/-** button to choose the file you want to lock.
- 3 Press the **MENU** button.  
The menu opens (→ P.33).
- 4 Press the **FF/+** or **REW/-** button to open the locking screen.



- a Current folder
- b File to be locked

- 5 Press the **PLAY** button.  
The file locking setup process begins.
- 6 Press the **FF/+** or **REW/-** button to choose between **ON** and **OFF**.  
ON : Locks the file and prevents it from being erased.  
OFF: Unlocks the file and allows it to be erased.



- c Erase lock indicator


- 7 Press the **PLAY** button to complete the setup process.
- 8 Press the **STOP** button to close the menu.

## Notes

- The locking function of the DM-1 is different from the read-only function on your PC.
- Any locked files are erased when you format a SmartMedia card.



# Menu List (VOICE MODE)

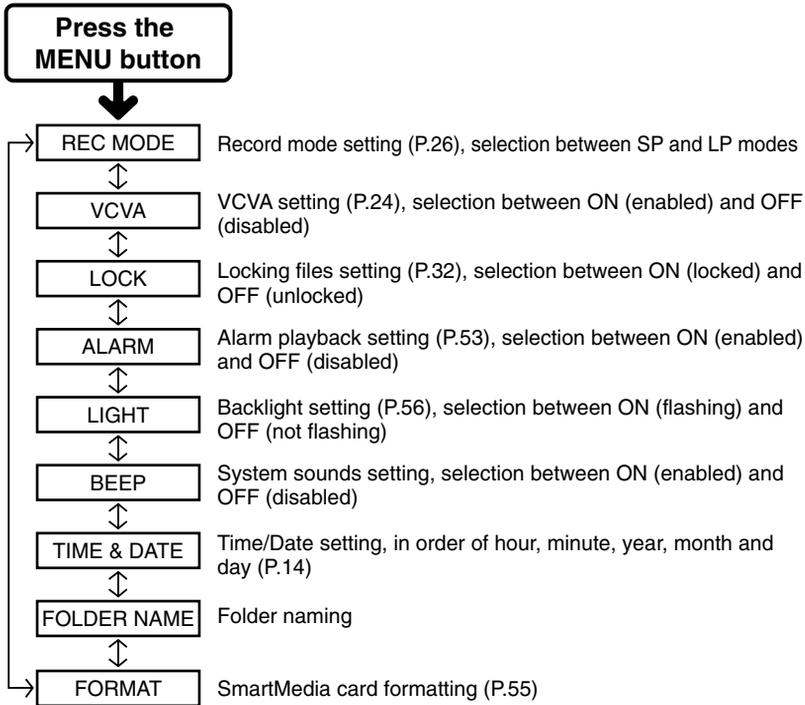

## Notes

- If you press the STOP button, the REC button, or the MENU button during a menu setup operation, the recorder will stop and apply the items that were set to that point.
- The recorder will stop if you leave it idle for 3 minutes during a menu setup operation, when a selected item is not applied.

↑↓ : Press the FF /+ or REW/- button

# Managing Files on Your PC

## Using DSS Player

By connecting the DM-1 to your PC, you will be able to use DSS Player in the following ways:

- To play the voice files from your PC.
- You can send voice mail by sending an attached voice file with e-mail.\*
- You can make backup files of the voice files on the SmartMedia card on your PC, and can later transfer files on your PC to the DM-1, as necessary.

\* The e-mail software is not included in this package.

### Precautions when handling SmartMedia files on your PC

- **Do NOT format the SmartMedia card using your PC. If you do, the DM-1 will not be able to recognize the SmartMedia card. Only format the cards using either the DM-1 or the Olympus CAMEDIA digital camera (→P.55).**
- **The folder names that can be set with the DM-1 or the included DSS Player are only effective for the DM-1 and DSS Player. Note that the default names on Microsoft Windows' file management software such as Explorer will be different names.**
- **If you change or move around the filenames on the SmartMedia using a file-management tool such as Explorer, note that the order of the files may change and/or you may not be able to recognize the files.**
- **Even if you use your PC and set the SmartMedia card for read only, you will still be able to read from and write to the SmartMedia using the DM-1.**

The general operations of DSS Player are discussed below. For more information on menus and operations, refer to Online Help. You will be able to use Online Help after DSS Player is installed.

## Using Online Help

To open Online Help, do either of the following:

- Click on the [Start] button, select <Programs>, then <Olympus DSS Player 2000 for DM-1>, then click on “DSS Player 2000 for DM-1 Help”.
- While DSS Player is running, choose <Contents> from the <Help> menu.
- While DSS Player is running, press <F1> on the keyboard.


### Search by contents

- 1 Once the Online Help screen appears, click on the Contents tab.
- 2 Double-click on the  icon of the desired topic heading.  
The title of the topic is displayed.
- 3 Double-click on the  icon of the desired topic.  
An explanation of the topic is displayed.



### Search by keyword



- 1 Once the Online Help screen appears, click on the Index tab.  
A list of keywords by which you can search is displayed.
- 2 Enter text.  
Matching keywords are located automatically.
- 3 Choose a topic, then click on <Display>.  
An explanation of the topic is displayed.

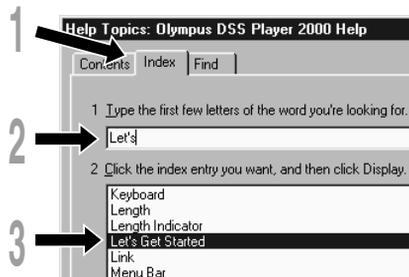

# Connecting to Your PC

Be sure to finish installing DSS Player before connecting the DM-1. If you connect the DM-1 before installing DSS Player, the “Add New Hardware Wizard” dialog box will open. If this happens, click on [Cancel] to exit the wizard, then install DSS Player.

Once you connect the DM-1 to your PC, the included USB cable will supply the power so you will not have to use batteries or an AC adapter with the DM-1.

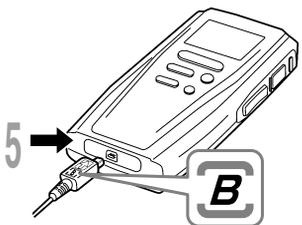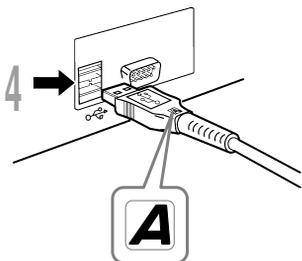

Connecting to Your PC

## Connecting to Your PC

- 1 Push the SmartMedia all the way into the slot (→P.12).
- 2 Set the DM-1's **POWER/LOCK** switch to **ON**.
- 3 Deactivate **HOLD**.
- 4 Insert end A of the USB cable to your PC's USB port or USB hub.
- 5 Confirm that the DM-1 is not in use before attaching end B of the USB cable to the PC terminal port of the DM-1.

“REMOTE” is displayed on DM-1 if the USB cable is connected.

REMOTE

## Disconnecting from Your PC

### With Windows 98/98 SE

- 1 Confirm that the record/play indicator lamp on the DM-1 is not flashing. Right-click on the Removable Disk icon in My Computer and select [Eject].
- 2 Disconnect the USB connecting cable.

### With Windows Me/2000

- 1 Click on the  on the task bar located at the lower-right corner of the screen. Click on [Stop USB Disk-Drive (E)].  
It will read [Stop USB Mass Storage Device-Drive (E)] for Windows 2000. The drive letter will differ depending on the computer being used.



- 2 When the Safe To Remove Hardware window appears, click on <OK>.
- 3 Disconnect the USB connecting cable.

### Notes


- NEVER remove the SmartMedia card or disconnect the USB connecting cable while the record/play indicator lamp is flashing. If you do, the data on the SmartMedia card will be destroyed.
- Refer to the user's manual for your PC regarding the USB port or USB hub on your PC.
- Be sure that you connect the USB cable either directly to the USB port on your PC or the self-power (AC adapter connection) USB hub.
- Be sure to push the cable connector all the way in. Otherwise, the DM-1 may not operate properly.

# Running DSS Player

It is assumed that the DSS Player has been installed.

If you connect the DM-1 before installing DSS Player, the “Add New Hardware Wizard” dialog box will open. If this happens, click on [Cancel] to exit the wizard, then install DSS Player.

- 1 Start Windows.
- 2 Connecting the DM-1 to your PC.  
For the connection procedure, refer to “Connecting to Your PC” (→P.36).
- 3 Click on the [Start] button.
- 4 Point to <Programs>, then choose “Olympus DSS Player 2000 for DM-1”.
- 5 Click on the <Olympus DSS Player 2000 for DM-1> button.

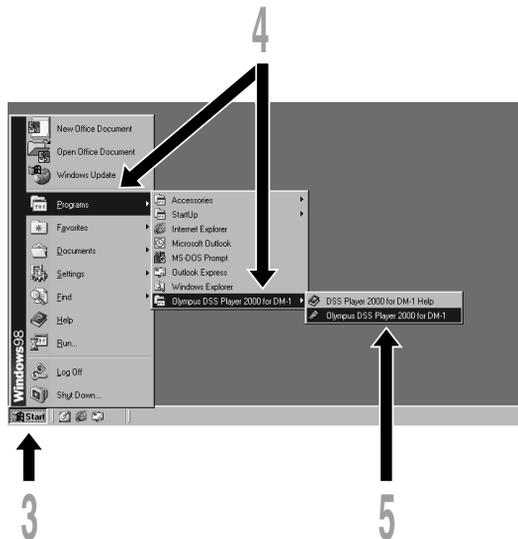

Before disconnecting the DM-1 from your PC, refer to “Disconnecting from Your PC” (→P.37).

## Note

You will not be able to run the included DSS Player 2000 for DM-1 and DSS Player 3.0/3.1/3.5 for DS-150/320 at the same time.

## About automatic startup

By connecting the DM-1 to your PC, you can automatically start an application.

If you have DSS Player installed, it will start up automatically.

If you have a music utility installed, regardless of whether you have DSS Player installed or not, MusicMatch Jukebox will automatically start.

The following three settings can be made regarding automatic startup.

- Automatically start DSS Player
- Automatically start MusicMatch Jukebox
- Do not automatically start an application

### To change the automatic start setting

**1** Right-click on  icon of the Task Bar on the lower right-hand corner on the screen, then click on **Select startup application**.

**2** Check the application to automatically start.

The application that you check will automatically start.

If you do not want it to automatically start, uncheck the application.

# Import Voice Files to Your PC

Importing voice files to your PC from the DM-1 is called downloading. With DSS Player, there are three ways to download voice files to your PC:

- Download Selected Files  
Download one or several voice files to your PC.
- Download Folders  
Download all the voice files in one folder.
- Download All


Click on the  icon and download all the voice files stored in the DM-1 to your PC.

The following is an explanation of “Download Selected Files”. For explanations of “Download Folders” and “Download All”, refer to Online Help.

## Download Selected Files

### 1 Select the folder.

From the Device Manager window, select the folder that contains the voice file you would like to download. The illustration shows that Folder A has been selected.

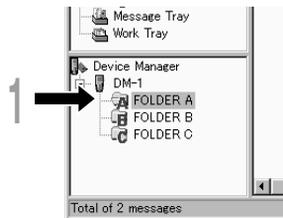


### 2 Select the voice file.

Select the voice file you would like to download from the voice file list box. To select more than two files, hold either the <Ctrl> or <Shift> key pressed and select files. The illustration shows that one voice file is selected.




- 3 Download the voice file.**  
From the [Download] menu, click on [Download Selected Files].

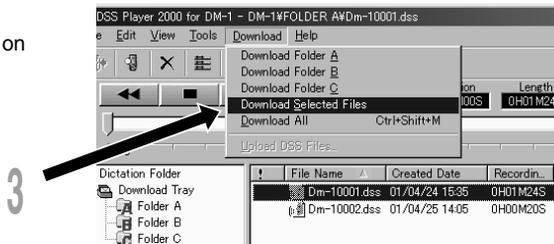

- 4 Download complete.**  
Once the transmission screen closes and the record/play indicator lamp on the DM-1 goes dark, the downloading is completed.\*

\* In general, it will take more than five seconds (more than 12 seconds with Windows 2000) after the transmission screen closes before downloading is completed.

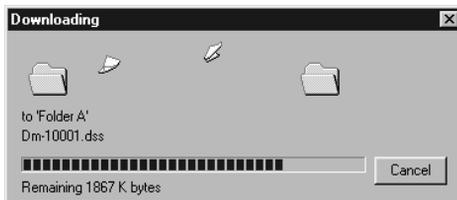

- 5 Transmission complete.**  
Before disconnecting the DM-1 from your PC, refer to “Disconnecting from Your PC” (→P.37).

## Notes

- NEVER remove the SmartMedia card or disconnect the USB connecting cable while the record/play indicator lamp is flashing. If you do, the data on the SmartMedia card will be destroyed.
- Depending on the size of the voice file and your PC, it may take longer to download the files.
- The downloaded files will be stored in the download tray folder that corresponds to the folder in the DM-1 (Example: A voice file downloaded from Folder A will be stored in download tray  on your PC.)
- If a voice file already exists on your PC with the same name, date and time recorded, the new file will not be downloaded.

# Using the DM-1 as a Music Player

## Using the DM-1 as a Music Player

The DM-1 can be used as a music player to play MP3- or WMA-format music files downloaded onto the SmartMedia card. In order to download music files on to the DM-1, use the included MusicMatch Jukebox.

### About music playback drivers


In order to play MP3 or WMA format music files, you will need the music playback drivers installed on your SmartMedia card. If for some reason the data on the SmartMedia card are erased or it is the first time you are using the SmartMedia card, be sure that the DM-1 is connected to your PC (→ P.36).

## Using MusicMatch Jukebox

Using MusicMatch Jukebox, you can download and listen to music CDs or music files downloaded from the Internet to your PC on the DM-1. There are many more features. For details, refer to MusicMatch Jukebox Online Help or read the PDF file.

### About Copyrights

Without copyright authorization, it is strictly prohibited to download voice or music files from the Internet, to copy and distribute a music CD, or to convert MP3 files for the purpose of uploading or re-uploading to the Internet or for commercialization.

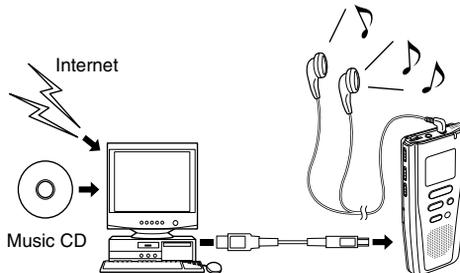

## Windows Media Audio License and Distribution Agreement

- You have acquired an item ("DM-1") that includes software licensed by OLYMPUS from Microsoft Licensing Inc. or its affiliates ("MS"). Those installed software products of MS origin, as well as associated media, printed materials, and "online" or electronic documentation ("SOFTWARE") are protected by copyright laws and international copyright treaties, as well as other intellectual property laws and treaties. The SOFTWARE is licensed, not sold.
  - \* [Approved alternative text if OLYMPUS does not mention MS in the EULA text: "You have acquired an item("DM-1") which includes software licensed by OLYMPUS from one or more software licensors ("OLYMPUS's Software Suppliers"). Such software products, as well as associated media, printed materials, and "online" or electronic documentation ("SOFTWARE") are protected by copyright laws and international copyright treaties, as well as other intellectual property laws and treaties."]
- IF YOU DO NOT AGREE TO THIS END USER LICENSE AGREEMENT ("EULA"), DO NOT USE THE DM-1 OR COPY THE SOFTWARE. INSTEAD, PROMPTLY CONTACT OLYMPUS FOR INSTRUCTIONS ON RETURN OF THE UNUSED DM-1(S) FOR A REFUND. ANY USE OF THE SOFTWARE, INCLUDING BUT NOT LIMITED TO USE ON THE DM-1, WILL CONSTITUTE YOUR AGREEMENT TO THIS EULA (OR RATIFICATION OF ANY PREVIOUS CONSENT).
- GRANT OF LICENSE. The SOFTWARE is licensed, not sold. This EULA grants you the following rights to the SOFTWARE:
  - > You may use the SOFTWARE only on the "DM-1".
  - > NOT FAULT TOLERANT. THE SOFTWARE IS NOT FAULT TOLERANT. [OLYMPUS] HAS INDEPENDENTLY DETERMINED HOW TO USE THE SOFTWARE IN THE "DM-1", AND MS HAS RELIED UPON [OLYMPUS] TO CONDUCT SUFFICIENT TESTING TO DETERMINE THAT THE SOFTWARE IS SUITABLE FOR SUCH USE.
  - > NO WARRANTIES FOR THE SOFTWARE. THE SOFTWARE is provided "ASIS" and with all faults. THE ENTIRE RISK AS TO SATISFACTORY QUALITY, PERFORMANCE, ACCURACY, AND EFFORT (INCLUDING LACK OF NEGLIGENCE) IS WITH YOU. ALSO, THERE IS NO WARRANTY AGAINST INTERFERENCE WITH YOUR ENJOYMENT OF THE SOFTWARE OR AGAINST INFRINGEMENT. IF YOU HAVE RECEIVED ANY WARRANTIES REGARDING THE "DM-1" OR THE SOFTWARE, THOSE WARRANTIES DO NOT ORIGINATE FROM, AND ARE NOT BINDING ON, MS.
  - > Note on Java Support. The SOFTWARE may contain support for programs written in Java. Java technology is not fault tolerant and is not designed, manufactured, or intended for use or resale as online control equipment in hazardous environments requiring fail-safe performance, such as in the operation of nuclear facilities, aircraft navigation or communication systems, air traffic control, direct life support machines, or weapons systems, in which the failure of Java technology could lead directly to death, personal injury, or severe physical or environmental damage. Sun Microsystems, Inc. has contractually obligated MS to make this disclaimer.
  - > No Liability for Certain Damages. EXCEPT AS PROHIBITED BY LAW, MS SHALL HAVE NO LIABILITY FOR ANY INDIRECT, SPECIAL CONSEQUENTIAL OR INCIDENTAL DAMAGES ARISING FROM OR IN CONNECTION WITH THE USE OR PERFORMANCE OF THE SOFTWARE. THIS LIMITATION SHALL APPLY EVEN IF ANY REMEDY FAILS OF ITS ESSENTIAL PURPOSE...
  - > Limitations on Reverse Engineering, Decompilation, and Disassembly. You may not reverse engineer, decompile, or disassemble the SOFTWARE, except and only to the extent that such activity is expressly permitted by applicable law not withstanding this limitation.
  - > SOFTWARE TRANSFER ALLOWED BUT WITH RESTRICTIONS. You may permanently transfer rights under this EULA only as part of a permanent sale or transfer of the "DM-1", and only if the recipient agrees to this EULA. If the SOFTWARE is an upgrade, any transfer must also include all prior versions of the SOFTWARE.
  - > EXPORT RESTRICTIONS. You acknowledge that the SOFTWARE, or any part thereof, or any process or service that is the direct product of the SOFTWARE (the foregoing collectively referred to as the "Restricted Components") are of U.S. origin. You agree to comply with all applicable international and national laws that apply to these products, including the U.S. Export Administration Regulations, as well as end-user, end-user and destination restrictions issued by U.S. and other governments. For additional information on exporting Microsoft products, see <http://www.Microsoft.com/exporting/>.

# Transferring Music Files to the DM-1

The procedure is discussed below, under the assumption that the Olympus Voice & Music DM-1 Utility Software has already been installed. If you try to access this utility before installation, the “Add New Hardware Wizard” will appear. Press <Cancel> to exit the wizard, then install the utility.

## 1 Start Windows.

## 2 Connecting the DM-1 to your PC.

For the connection procedure, refer to “Connecting to Your PC” (→P.36).

Once connection is completed, MusicMatch Jukebox will automatically start up.

If you do not want automatic startup, perform the following:

- 1 Click on the [Start] button.
- 2 Select <Programs> then <MusicMatch>.
- 3 Click on <MusicMatch Jukebox>.

## 3 Double-click on a music file that appears in the My Library window and save in the play list.


If the music file begins to play, press the [Stop] button.

## 4 Click on <Download Playlist to Olympus DM-1> under <Send to Device> of the <File> menu.

## 5 Select a music file that is listed in the Transfer Possible File window, then click on the <Download to Player> button.

Once the transmission screen closes and the record/play indicator lamp on the DM-1 goes dark, the transferring is completed.\*

\* In general, it will take more than five seconds (more than 12 seconds with Windows 2000) after the transmission screen closes before transferring is completed.

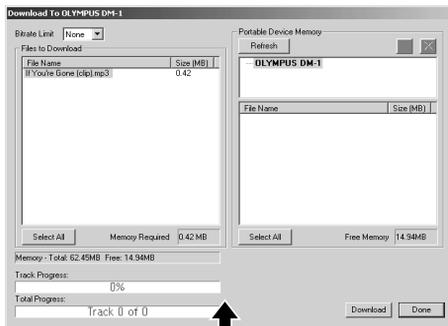

## 6 Transmission complete.

Before disconnecting the DM-1 from your PC, refer to “Disconnecting from Your PC” (→P.37).

### Transferring a sample music file to the DM-1

- ① Add “If You’re Gone (clip).mp3” to the play list from C:\My Documents\My Music.
- ② Click on <Download Playlist to Olympus DM-1> under <Send to Device> of the <File> menu.
- ③ Select “If You’re Gone” and click on <Download to Player>.

If you do not want MusicMatch Jukebox to automatically start, you can change the setting. To do so, refer to “About automatic startup” (→P.39).


.....

#### Notes

- NEVER remove the SmartMedia card or disconnect the USB connecting cable while the record/play indicator lamp is flashing. If you do, the data on the SmartMedia card will be destroyed.
- Be sure to use only SmartMedia cards with the ID function.



# Music Playback

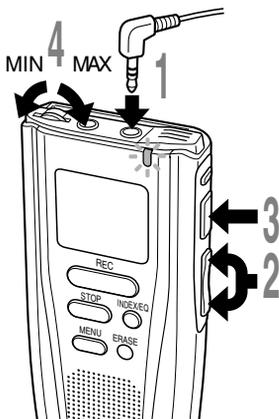

1 Plug the earphone plug into the **EARPHONE** jack.

2 Press the **FF/+** or **REW/-** button to choose the music file that you want to play\*.

The filename and the length of the music track will be displayed. The display of the track length will change to “00:00s” after approximately 2 seconds.




- (a) FILENAME
- (b) 05M08s
- (a) File being selected
- (b) Length of the file being selected

3 Press the **PLAY** button to start playback.

The record/play indicator lamp will flash in green, and the title and artist name will scroll on the left side of the screen.

Example: If you input TITLE for the title and ARTIST for the artist name, it will be scrolled as TITLE/ARTIST.



- (c) TITLE/ART
- (d) 02M08s
- (c) Title and artist name of the file being played
- (d) Play time of the file being played

4 Adjust the **VOLUME** control to your liking.

The next track will automatically start once the track being played is finished.

\* If you hold the FF/+ or REW/-, files are skipped continuously (continuous skip).

## Notes

- The bit rates for playback possible on the DM-1 are 32 kbps to 160 kbps for both the MP3 and WMA format.
- When playing back a file with a bit rate below 64 kbps, the displayed time may not be accurate.
- It is possible to play back files with different bit rates (converting the bit rate within one file); however, the displayed time may not be accurate.
- When using the earphones, do NOT set the volume too high. Listening at very high volume may lead to hearing loss.
- It is possible to listen to music without the earphones, using the internal speakers; however, the sound will be in mono, not stereo.
- If neither the title nor artist name was recorded, "UNKNOWN" will be displayed on the screen.
- You may use alphanumerics and symbols except for #, \$, @, [, ], \, ^, ', ^, {, and } for the title and artist names.
- You may use alphanumerics and symbols except for #, \$, @, [, ], \, ^, ', ^, {, and } for the filenames. (Any lowercase letters you use in filenames will appear as capitals.)
- If the filename consists of more than 9 characters, it will be shortened on the display (example: FILEABCDE becomes FILEA~1).
- It is possible to record up to 30 characters each for the title and artist name.

## Playback Functions

### Skip a Music File While Playing It

Press the **FF/+** button while playing a music file.

- ➡ The recorder skips to the beginning of the next track and starts playing it.

Press the **REW/-** button while playing a music file.

- ➡ The recorder skips to the beginning of the current track and starts playing it.

### Fast Forward

Hold the **FF/+** button while playing a music file.

- ➡ Will fast-forward to the end of the track and stop at the beginning of the next track.

### Canceling Fast Forward

Release the **FF/+** button where you want the music file played.

- ➡ Playback begins.

### Fast Rewind

Hold the **REW/-** button while playing a music file.

- ➡ Will rewind to the beginning of the current track and resume playback.

### Canceling Fast Rewind

Release the **REW/-** button where you want the music file played.

- ➡ Playback begins.

### Canceling Playback

Press the **PLAY** or **STOP** button.

- ➡ Will stop playing the current track midway.
- If the **STOP** button is pressed while the track is not being played, the file format and bit rate will be displayed.

### Various Playback Features

#### Equalizer

The equalizer mode is switched in the following order each time the **INDEX/EQ** (equalizer) button is pressed with playback stopped or during playback.

→ FLAT → ROCK → POP → JAZZ → USER →

You can make your own equalizer settings using the user equalizer (USER EQ) function.

- If no action is taken within 2 seconds after the INDEX/EQ button is pressed, the display will revert to the normal indication.

#### Repeat and Random Play

The play mode is switched in the following order each time the **FOLDER/REPEAT** button is pressed with playback stopped or during playback.

→ Normal play → Single music repeat play → All music repeat play →  
Random play ← Random repeat play ←


Function	Explanation	Display indicator
Normal play	Will stop after all the tracks been played	No indication
Single music repeat play	Will play one track repeatedly	
All music repeat play	Will play all the tracks from first to last continuously	
Random repeat play	Will continuously play all the tracks in random order	
Random play	Will stop after all the tracks have been played in random order	RANDOM

- If no action is taken within 2 seconds after the FOLDER/REPEAT button is pressed, the display will revert to the normal indication.



# Locking Music Files

Locking a music file keeps important data from being accidentally erased.  
Locked music files are not erased when you choose to erase all music files.

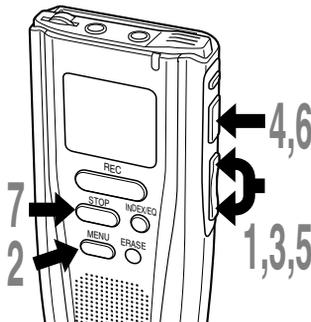

**1** Press the **FF/+** or **REW/-** button to choose the music file you want to lock.

**2** Press the **MENU** button.  
The menu opens (→ P.52).


**3** Press the **FF/+** or **REW/-** button to open the locking screen.

**4** Press the **PLAY** button.  
The music file locking setup process begins.


**5** Press the **FF/+** or **REW/-** button to choose between **ON** and **OFF**.  
**ON** : Locks the music file and prevents it from being erased.  
**OFF** : Unlocks the music file and allows it to be erased.

**6** Press the **PLAY** button to complete the setup process.

**7** Press the **STOP** button to close the menu.

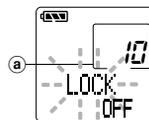

**a** File to be locked

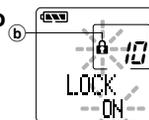

**b** Erase lock indicator

## Note

Any locked music files are erased when you format a SmartMedia card.




# Increasing the WOW effect

The DM-1 has WOW, an audio processing technology that increases sound presence and bass quality. The level of the surround effect (SRS 3D) and the bass effect (TruBass) may be individually adjusted through three levels of processing or turned off.

Surround effect (SRS 3D): Increases the sound-expansion effect and sound clarity.

Bass effect (TruBass): Enriches the low sounds.

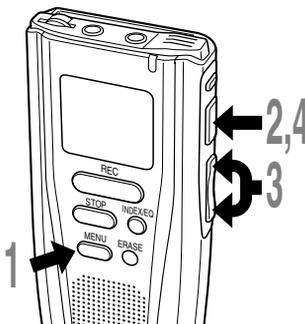

**1 Press the MENU button.**  
“WOW effect” will be displayed on the screen (→ P.52).



**2 Press the PLAY button.**  
The surround effect setup process begins (SRS 3D).

**3 Press the FF/+ or REW/- button to select the surround effect level.**


→ OFF → Low → Middle → High ←



Will switch in this order.

**4 Press the PLAY button to register your setting.**

The bass effect setup process begins (TruBass).

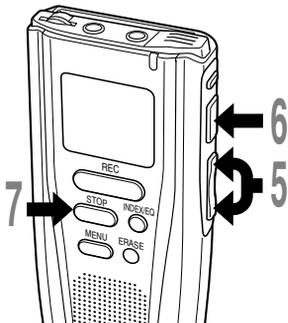

**5 Press the FF/+ or REW/- button to select the bass effect level.**

← OFF ↔ Low ↔ Middle ↔ High ←

Will switch in this order.



**6 Press the PLAY button to register your setting.**

**7 Press the STOP button to close the menu.**

If you wish to set other menus, press and hold the PLAY button for more than 1 second without pressing the STOP button.


If you wish to change the WOW level while listening to a track, press the MENU button during playback and repeat the procedure from step 3.

### Notes

- Both the surround effect and bass effect are OFF as the WOW default settings.
- If there is no action taken within 8 seconds during the WOW settings during playback, the DM-1 will revert to normal play.
- "WOW" will be displayed on the screen if the surround effect or the bass effect is set.
- The WOW effect will be weakened if the bit rate for any music file is less than 32 kbps.
- Depending on the song, the WOW effect will be heightened, and may sound like noise. If this happens, adjust the WOW effect.



# Menu List (MUSIC MODE)

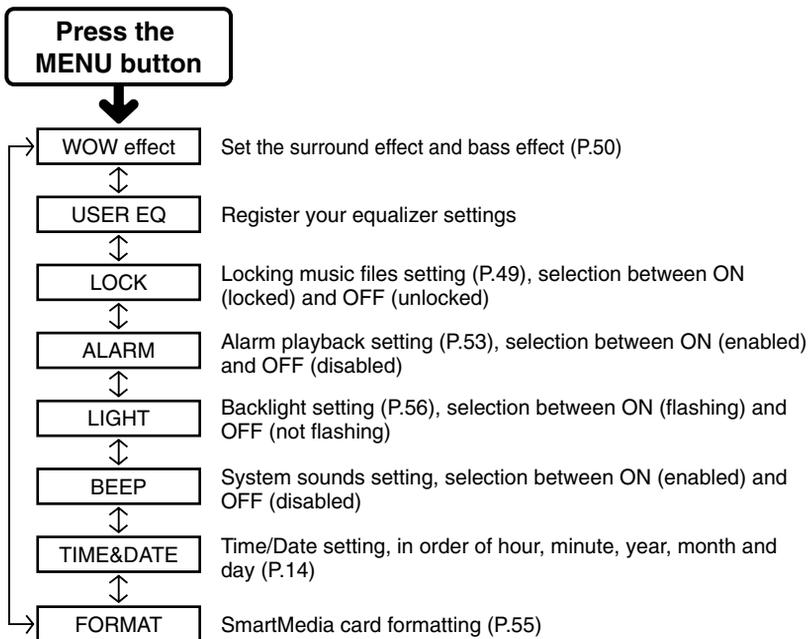

## Notes

- If you press the STOP button, the REC button, or the MENU button during a menu setup operation, the recorder will stop and apply the items that were set to that point.
- The recorder will stop if you leave it idle for 3 minutes during a menu setup operation, when a selected item is not applied.


: Press the FF /+ or REW/- button

# Features Common to the Voice Recorder and Music Player




## Alarm Playback Function

The alarm playback function can be set to play a selected file at a pre-set time.

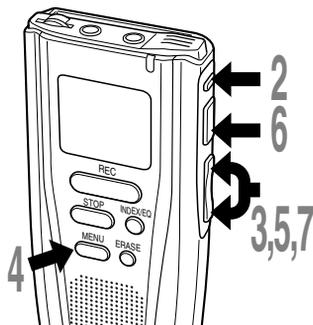


- 1 Set the **MODE** switch to either **MUSIC** or **VOICE**.**
- 2 Press the **FOLDER** button to choose a folder.**  
If you select **VOICE** mode, you do not need to select a folder. → Step 3
- 3 Press the **FF/+** or **REW/-** button to choose the file to be played when the alarm sounds.**
- 4 Press the **MENU** button.**  
The menu opens (→ P.33,52).
- 5 Press the **FF/+** or **REW/-** button to open the alarm playback setup screen.**  
The illustration below shows if a voice file has been selected for the alarm setting.
- 6 Press the **PLAY** button.**  
The alarm playback setup process begins.
- 7 Press the **FF/+** or **REW/-** button to select **ON**.**  
ON: Enables alarm playback.  
OFF: Disables alarm playback.



- a** Current folder
- b** File to be played when alarm sounds




## Alarm Playback Function

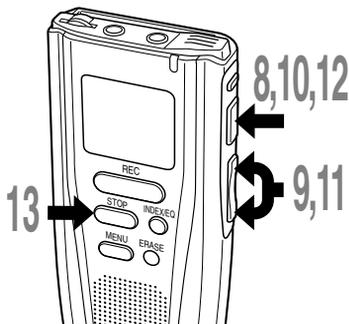

**8 Press the **PLAY** button to complete the setup process.**


The hour indicator flashes.  
When you choose OFF, the alarm playback setup process ends, and the alarm indicator disappears. → Step 13

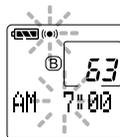

**9 Press the **FF/+** or **REW/-** button to set the hour.**

**10 Press the **PLAY** button to accept the hour.**

The minute indicator flashes.

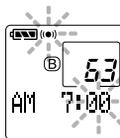

**11 Press the **FF/+** or **REW/-** button to set the minute.**

**12 Press the **PLAY** button to accept the minute.**

**13 Press the **STOP** button to close the menu.**

An alarm tone will sound at the scheduled time. Press any button while the alarm sounds to play the file you associated with the alarm.


### Notes

- The alarm playback function can be set for only one file at a time.
- The alarm will sound at the scheduled time every day unless the alarm playback setting is cleared.
- If you wish to change the file for alarm play, first turn the alarm settings OFF, then make any desired new alarm settings.
- The alarm will sound for 5 minutes and then stop.
- If you are using the recorder at the scheduled time, the alarm will sound after you're done.
- The alarm will sound at the scheduled time even if the recorder is set to hold. The recorder begins to play the file associated with the alarm when you press any button.
- The alarm playback setting is cleared if the selected file is erased or the SmartMedia card is ejected.
- The alarm won't launch at the scheduled time if the POWER/LOCK switch is set to OFF.



# Formatting SmartMedia

Formatting prepares SmartMedia cards for recording. SmartMedia cards that have been used on non-Olympus devices, or that can't be accessed by this unit, require formatting. The SmartMedia card that comes with this unit and Olympus SmartMedia cards are preformatted and can be used immediately following purchase.

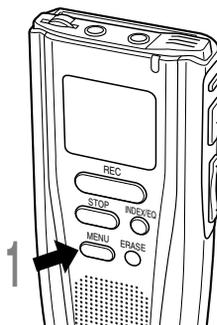

**1 Press the MENU button.**

The menu opens (→ P.33,52).

**2 Press the FF/+ or REW/- button to open the FORMAT screen.**



**3 Press the PLAY button.**


The formatting process is selected.

**4 Press the FF/+ or REW/- button to choose "YES?".**



**5 Press the PLAY button again.**

Formatting begins and an indicator flashes on the display.



"FORMAT OK" displays when formatting ends.





### Notes

- If no action is taken within 8 seconds after step 4, the menu will revert to the status of step 2.
- When a SmartMedia card is formatted, all the stored data, including locked files, is erased.
- A SmartMedia card with a write-protect seal attached to it cannot be formatted (→ P.8).
- If an unformatted SmartMedia card is inserted, "FORMAT YES?" will display automatically.



**Never use any SmartMedia card other than one that has been formatted with this unit or with a CAMEDIA series Olympus digital camera.**

Other SmartMedia cards may not perform as expected.

The backlight for the DM-1 will be activated for approximately 15 seconds each time a button is pressed. You can select whether or not you would like to use the backlight.

### 1 Press the **MENU** button.

The menu opens (→ P.33,52).

### 2 Press the **FF/+** or **REW/-** button to open the backlight setup screen.



### 3 Press the **PLAY** button.

The backlight setup process begins.


### 4 Press the **FF/+** or **REW/-** button to choose between **ON** and **OFF**.

### 5 Press the **PLAY** button to complete the setup process.

### 6 Press the **STOP** button to close the menu.



## Hold

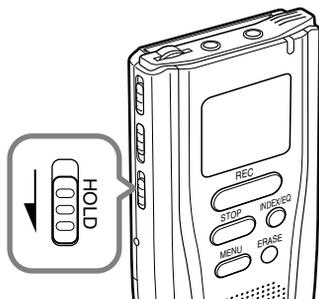

### Setting the HOLD switch to the HOLD position.

If you set the DM-1 to HOLD status by sliding the HOLD switch in the direction of the arrow, the current conditions will be preserved, and all buttons and switches except the HOLD switch will be disabled. This feature is useful when the recorder has to be carried in a bag or pocket.

Remember to reset the HOLD switch when using the recorder.

#### Notes

- If you set the DM-1 to hold during the Stop mode, the current time will be displayed. If you press any button, the time will flash for about 2 seconds, but the function of the button is disabled.
- The alarm will sound at the scheduled time even if the recorder is set to hold. The recorder begins to play the file associated with the alarm when you press any button.



## Reset



If the display or the recorder acts strangely, lightly press the reset button in the battery compartment with the tip of a ballpoint pen or a similar object.

#### Notes

- Do not use a sharp object such as a needle.
- The time/date setup process launches automatically when you press the reset button. Set the time and date again (→ P.14-15).
- Audio data is not erased when the recorder is reset.

# Alarm Message List

Message	Meaning	Explanation	Action
BATTERY LOW	Low battery power	Battery power is getting low.	Replace with new batteries (→ P.10).
Ⓜ CARD	Write-protected	Tried to record to, or erase from, a SmartMedia card with a write-protect seal attached.	Remove the write-protect seal from the SmartMedia card and try again (→ P.8).
CARD ERROR	Incompatible SmartMedia	An incompatible SmartMedia card was inserted.	Insert a compatible SmartMedia card (→ P.7).
CONNECT to PC	No file for playing music	There is no music file compatible for playback on the SmartMedia card.	Connect the USB cable to the DM-1 and computer (→ P.36).
EJECT ERROR	SmartMedia ejection error	The SmartMedia card was ejected during an operation.	Reinsert the SmartMedia card.
FOLDER FULL	Folder full	The folder is full of files (maximum of 199 files).	Erase files that are no longer required, or insert another SmartMedia card.
FORMAT ERROR	Formatting error	An error was encountered while formatting.	Reinsert the SmartMedia card and then reformat it (→ P.55).
INDEX FULL	Index full	The file is full of index marks (maximum of 16 marks).	Erase index marks that are no longer required (→ P.27).
INSERT CARD	No card	There is no SmartMedia card inserted.	Insert a SmartMedia card (→ P.12).
LICENCE MISMATCH	License does not match	The license ID does not match.	Copy the sound file to the DM-1 using MusicMatch Jukebox (→ P.44).
Ⓜ LOCK ON	Erase-locked	Tried to delete a locked file.	Unlock the file (→ P.32,49).
MEMORY FULL	Zero remaining memory	The SmartMedia card has no remaining memory.	Erase files that are no longer required or insert another SmartMedia card.
NO FILE	No file	No files were found in the folder.	Select another folder.
Ⓜ READONLY	Unrecordable	There is something wrong with the SmartMedia card.	Back up the data and format the SmartMedia card.
SAME FILE	File cannot be transferred	A file with the same file name* already exists in the destination folder.	Transfer the file to another folder.

\* File names are assigned during recording for file management purposes.

# Troubleshooting

Symptom	Probable cause	Action
<b>Nothing appears on the display</b>	The batteries are not loaded properly.	Verify polarity is correct.
	The batteries are dead.	Replace with new batteries.
	The POWER/LOCK switch is set to OFF.	Set the POWER/LOCK switch to ON.
<b>Won't start</b>	If none of these suggestions works	Reset the recorder (→ P.57).
	The recorder is in HOLD mode.	Release the recorder from HOLD (→ P.57).
	The SmartMedia card is not formatted.	Format the SmartMedia card (→ P.55).
<b>Unable to record</b>	The batteries are dead.	Replace with new batteries.
	The SmartMedia card has a write-protect seal attached to it.	Remove the seal.
	The SmartMedia card is unformatted.	Format the SmartMedia card.
<b>No playback tone heard</b>	The SmartMedia card does not have enough memory.	Erase unnecessary files or insert another SmartMedia card.
	The maximum number of files has been reached.	Check another folder.
	MUSIC mode is active.	Set the MODE switch to VOICE.
<b>Unable to erase</b>	The earphone is connected.	Unplug the earphones to use the internal speakers.
	The VOLUME control is set to 0.	Adjust the VOLUME control.
<b>Noise heard during playback</b>	The file is locked.	Unlock the file (→ P.32,49).
	The SmartMedia card has a write-protect seal attached to it.	Remove the seal.
<b>Recording level too low</b>	The recorder was shaken during recording.	—
	The recorder was placed near a cell phone or fluorescent lamp while recording or during playback.	Move the recorder.
<b>Unable to set index marks</b>	The microphone sensitivity is too low.	Set the microphone sensitivity to CONF mode and try again.
	The maximum number of index marks (16) has been reached.	Erase unnecessary index marks (→ P.27).
<b>Won't work with AC adapter</b>	The SmartMedia card has a write-protect seal attached to it.	Remove the seal.
	The file is locked.	Unlock the file (→ P.32,49).
	A non-standard AC adapter is being used.	Use the Olympus A321 (for US, Canada) or A322 (for Europe except U.K) AC adapter (Optional).

## Troubleshooting

---

<b>Symptom</b>	<b>Probable cause</b>	<b>Action</b>
<b>Unable to eject the SmartMedia card</b>	The POWER/LOCK switch is set to ON.	Set the POWER/LOCK switch to OFF.
<b>Cannot find the downloaded file</b>	The destination folder for downloading was other than the SmartMedia root folder. VOICE mode is active.	Copy the music file into the root folder. Switch to MUSIC mode.
<b>Cannot find the recorded voice</b>	MUSIC mode is active. Wrong folder.	Switch to VOICE mode. Switch to the right folder.

# Accessories (optional)

---

## **SmartMedia cards of 16, 32, 64, and 128MB:M-16/32/64/128**

Olympus CAMEDIA digital camera series 3 V (3.3 V) SmartMedia memory cards can be used.

## **PC card adapter:MAPC-10**

Allows files to be transferred to a PC that has a PC card slot or PC card drive.

## **External microphone:ME10\***

A lavalier omnidirectional microphone that clips to clothing. Used to record your own voice or people near you.

## **Noise-Cancellation microphone:ME12 (Dictation microphone)**

Used to get crisp recordings of your own voice by reducing the effects of ambient noise. Recommended to improve the accuracy when using voice-recognition software.

## **AC adapter:A321 (US and Canada) or A322 (Europe except U.K.)**

## **Ni-MH Rechargeable Battery Charger: BU-400**

Charger for AA batteries (1 to 4) or 1 to 2 AAA batteries.

## **Ni-MH Rechargeable Battery: BR401**

High-efficiency rechargeable long life batteries.

## **Connecting cord:KA232\***

Use to connect the microphone jack of this unit to a radio or other sound source.

## **Plug adapter:PA3**

An adapter that connects devices such as microphones with  $\varnothing 2.5$  mm mini-plugs to the unit's  $\varnothing 3.5$  mm mini-jack.

\* Use these accessories with the PA3 plug adapter.

# Specifications

## For the Digital Voice Recorder

**Recording format** DSS (Digital Speech Standard)

**Input level** -70 dBv

**Sampling frequency**

SP mode: 12 kHz

LP mode: 8 kHz

**Overall frequency response**

SP mode: 300 to 5,000 Hz

LP mode: 300 to 3,000 Hz

**Recording time** SP mode: 10 hours 20 minutes

LP mode: 22 hours 10 minutes  
(64MB card)

**Battery life (Recording)** Approx. 11 hours

**(Playback)** Approx. 8 hours

(with alkaline batteries, based on our standard testing procedure)

## For the Digital Music Player

**Compatible data format**

WMA, MP3 format

(using the multidecoder system)

**Sampling frequency**

44.1 kHz

**Frequency band** 20 to 20,000 Hz

**Playback time** Bit rate 160 kbps: 50 minutes

Bit rate 128 kbps: 60 minutes

Bit rate 96 kbps: 84 minutes

Bit rate 64 kbps: 120 minutes  
(64MB card / Time may vary depending on the bit rate of the music data.)

**Maximum headphone output**

5mW + 5mW (at load of 16 Ω)

**Battery life** Approx. 8 hours

(with alkaline batteries, based on our standard testing procedure)

## Common specifications

**Recording media**

SmartMedia cards: 3 or 3.3 V, 4 to 128 MB

(Any SmartMedia card without an ID feature cannot be used with the Music Player.)

**Card format** SSFDC Forum-compliant

SmartMedia format

**Speaker** Built-in ø28 mm round dynamic speaker

**Microphone jack** ø3.5 mm mini-jack, impedance 2 kΩ

**Earphone jack** ø3.5 mm mini-jack, impedance 16 Ω

**Maximum working output (3 V DC)**

180 mW or more (8 Ω speaker)

**Input power requirement**

Rated voltage: 3 V

Batteries: Two AAA batteries (LR03 or R03) or Two Ni-MH rechargeable batteries

External power supply: AC adapter

**External dimensions**

109.5 x 50.0 x 16.7 mm (without protrusions)

**Weight** 86 g (including batteries)

\* Specifications and design are subject to change without notice.

\* Battery life varies greatly according to type of batteries used and the conditions of use.

# Technical Assistance and Support

---

The following are contact information for technical support for Olympus recorders and software only.

- ◆ Technical Hotline Number in the U.S. and Canada  
1-888-553-4448
- ◆ User Support E-mail address in the U.S. and Canada  
distec@olympus.com
- ◆ Technical Hotline Number in Europe  
Toll free number  
00800 67 10 83 00  
available for Austria, Belgium, Denmark, Finland, France, Germany, Italy, Luxemburg,  
Netherlands, Norway, Portugal, Spain, Sweden, Switzerland, United Kingdom  
  
Charged numbers for the Rest of Europe  
+49 180 567 1083  
+49 40 23773 899
- ◆ User Support E-mail address in Europe  
dss.support@olympus-europa.com

- ◆ MusicMatch Jukebox Customer Support  
Internet  
Contact us through the web. We have many forms in place for you to easily reach the correct department.  
  
Email  
If you would like to send us your comments or suggestions for future enhancements, please email them to us at: [customersupport@musicmatch.com](mailto:customersupport@musicmatch.com)  
  
Mail (Regular)  
MusicMatch  
16935 W Bernardo Dr.  
Suite 270  
San Diego, CA 92127  
USA

**OLYMPUS CORPORATION**

Shinjuku Monolith, 3-1 Nishi-Shinjuku 2-chome, Shinjuku-ku, Tokyo 163-0914, Japan. Tel. 03-3340-2111

**OLYMPUS AMERICA INC.**

Two Corporate Center Drive, Melville, NY 11747-3157, U.S.A. Tel. 1-800-622-6372

**OLYMPUS EUROPA GMBH**

(Premises/Goods delivery) Wendenstrasse 14-18, 20097 Hamburg, Germany. Tel. 040-237730  
(Letters) Postfach 10 49 08. 20034 Hamburg, Germany.

**OLYMPUS UK LTD.**

2-8 Honduras Street, London EC1Y 0TX, United Kingdom, Tel. 020-7253-2772  
<http://www.olympus.com>

**Declaration of Conformity**

Model Number: DM-1  
Trade Name: DIGITAL VOICE RECORDER  
Responsible Party: OLYMPUS AMERICA INC.  
Address: 2 Corporate Center Drive, Melville, NY 11747-3157, U.S.A.  
Telephone Number: 800-622-6372

This device Complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

 Tested To Comply  
With FCC Standards  
FOR HOME OR OFFICE USE

**Canadian RFI**

This digital apparatus does not exceed the Class B limits for radio noise emissions from digital apparatus as set out in the Radio Interference Regulations of the Canadian Department of Communications.

Cet appareil numerique ne depasse pas limites de Categorie B pour les emissions de bruit radio emanant d'appareils numeriques, tel que prevu dans les Reglements sur l'Interference Radio du Department Canadian des Communications.



"CE" mark indicates that this product complies with the European requirements for safety, health, environment and customer protection.



L'indication "CE" signifie que ce produit est conforme aux exigences concernant la sécurité, la santé, l'environnement et la protection du consommateur.



Das „CE“ Zeichen bestätigt die Übereinstimmung mit den Europäischen Bestimmungen für Betriebssicherheit und Umweltschutz.